

# Air Lift Adjustment Instruction

(3 steps soft-touch air lift system means a gentle push moves your machine from storage to flatbed to freearm positions)

## Air Lift Operation Instruction

### RAISING PLATFORM -


- ① Push down on the platform until you hear the click sound.
- ② Gently let the platform raise back up by itself to the next stage. [i.e. flat-bed / free-arm]

### LOWERING PLATFORM -

- ① Push down on the platform until you hear the click sound.
- ② Gently let the platform raise back up until you hear a second click.
- ③ Then push down until you reach the next position where you will also hear a click.
- ④ Gently let go to leave the platform in this position.


Failing this, please contact the dealer you purchased it from.  
They should be able to help.

**FREE-ARM POSITION - Cabinet is supplied with the position adjusted.**  
(User not necessary to adjust this free-arm position)

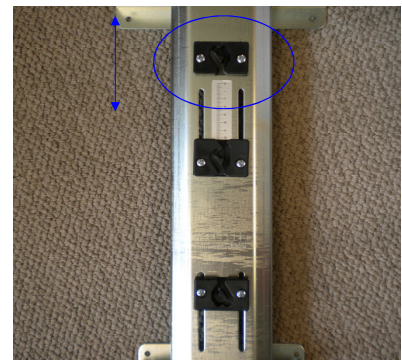


Adjust Plastic Holder move up / down by using Screwdriver

**FLAT-BED POSITION - Adjust so your Machine and Working Area are perfectly flat.**

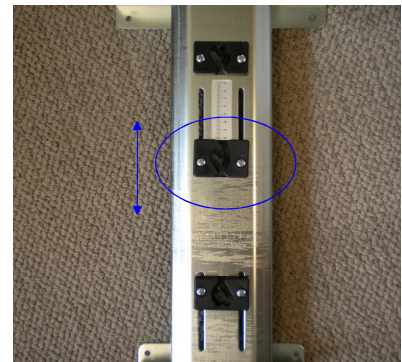

Adjust Plastic Holder move up / down by using Screwdriver

**STORAGE POSITION - Adjust platform so your Machine can perfectly sit inside cabinet after door and lid is closed.**

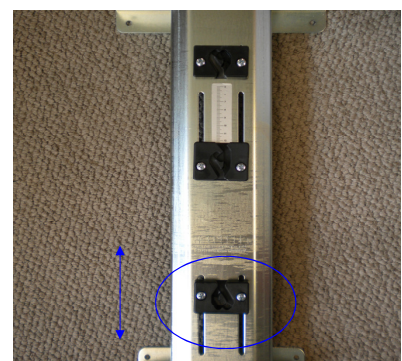

Adjust Plastic Holder move up / down by using Screwdriver