


# CARRINGTON


## ASSEMBLY INSTRUCTIONS

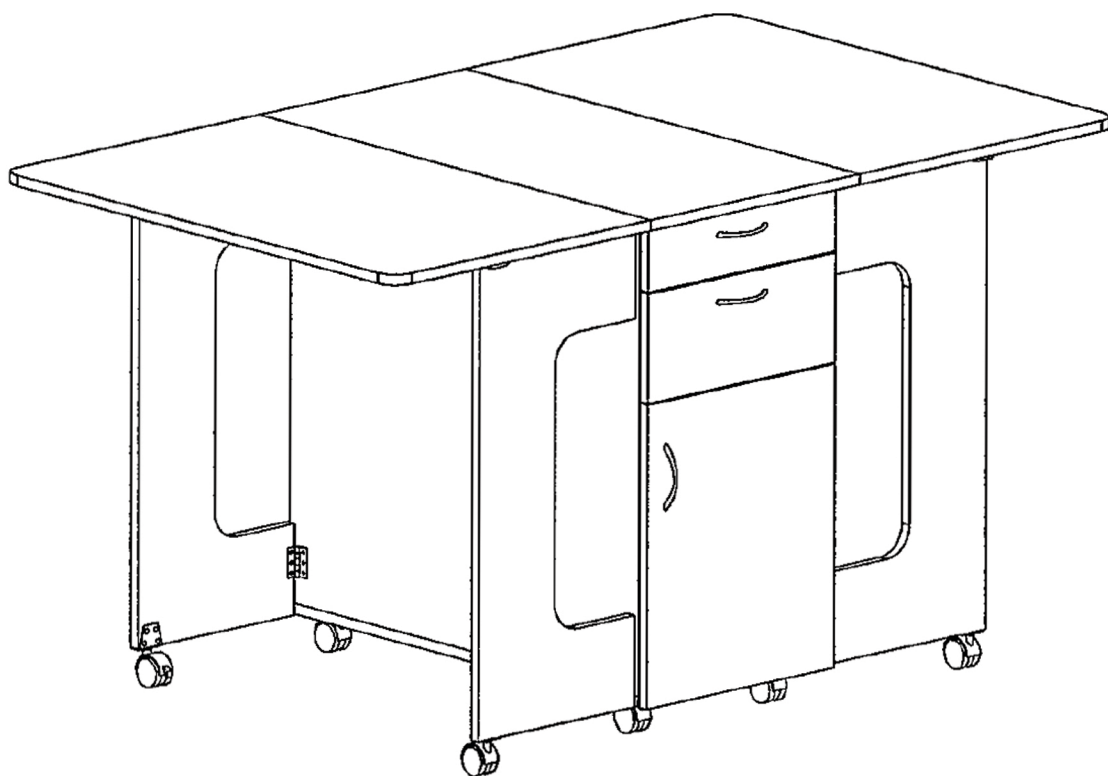


# Cutting Table Assembly Instructions

## CUTTING TABLE PANELS AND THEIR DESCRIPTIONS


Note: Hole positions helps with panel orientation.

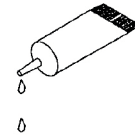


Before assembling place 2 to 3 drops of glue in dowel holes.  
Do Not place glue in cam or cam bolt holes.

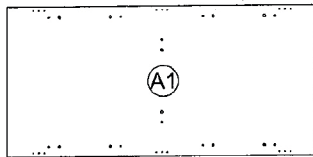


Top

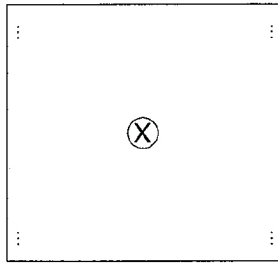


End Left

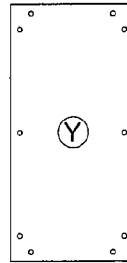


Division

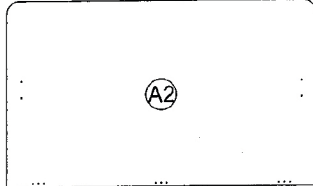


Back Flap(x2)

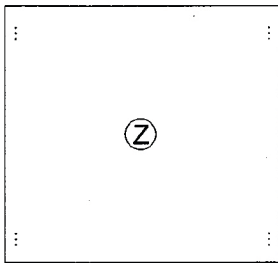


End Right

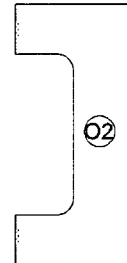


Gate Leg(x2)

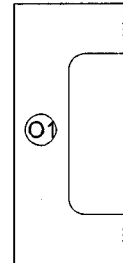


Gate Leg(x2)

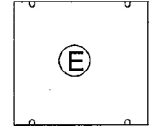


Shelf




Draw Front




Draw Front

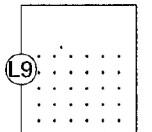


Draw Bottom

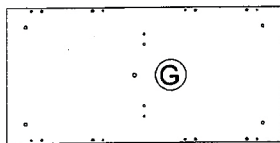

Bottom

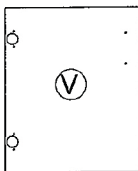


Door

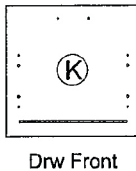

Draw Front




Draw Front(x2)




Draw Back



Draw Back(x2)




Draw Back(x2)




Draw Side R



Draw Side R(x2)




Draw Side R(x2)




Draw Side L
















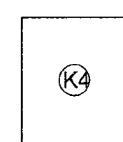






Draw Side L(x2)




Draw Side L(x2)

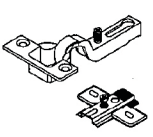

Draw Bottom(x5)

COMPONENTS	DESCRIPTION	QTY	COMPONENTS	DESCRIPTION	QTY
c3		42	t2		7
c1		42	t1		2
d1		36	g1		5
d2		30	r3		1
c2		42	g2		4
s1		104	h3		2
s2		8			
s6		20	m		4
h1		6	p1		4
b2		12			
		1			
h2		14			




Cam Bolt Ø30mm (x10)

## Assembly Steps

1. Screw Cam Bolts into the smaller holes as shown.

## 1. Bottom Pre-Assembly

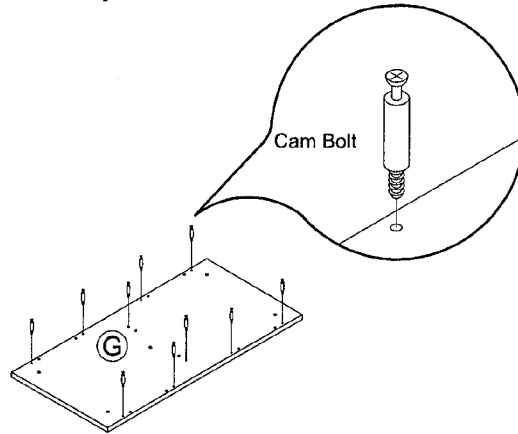


Cam Bolt Ø30mm (x10)

## Assembly Steps

1. Screw Cam Bolts into the smaller holes as shown.


## 2. Top Pre-Assembly

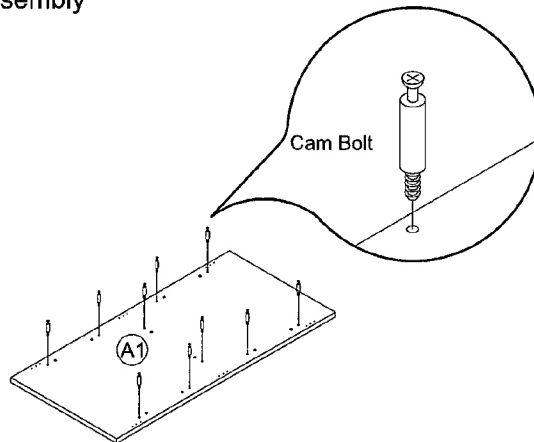

Cam Ø15mm (x8)



Dowel Ø8x30mm (x8)




Cam Bolt Ø30mm (x3)

## Assembly Steps


1. Press fit Cams into the End. Ensure the arrow on the Cam points to the nearest edge.
2. Place 2 to 3 drops of Glue in dowel holes in the End then tap Dowels into place.
3. Screw Cam Bolts into the smaller holes as shown.


## 3. Left Hand End Pre-Assembly

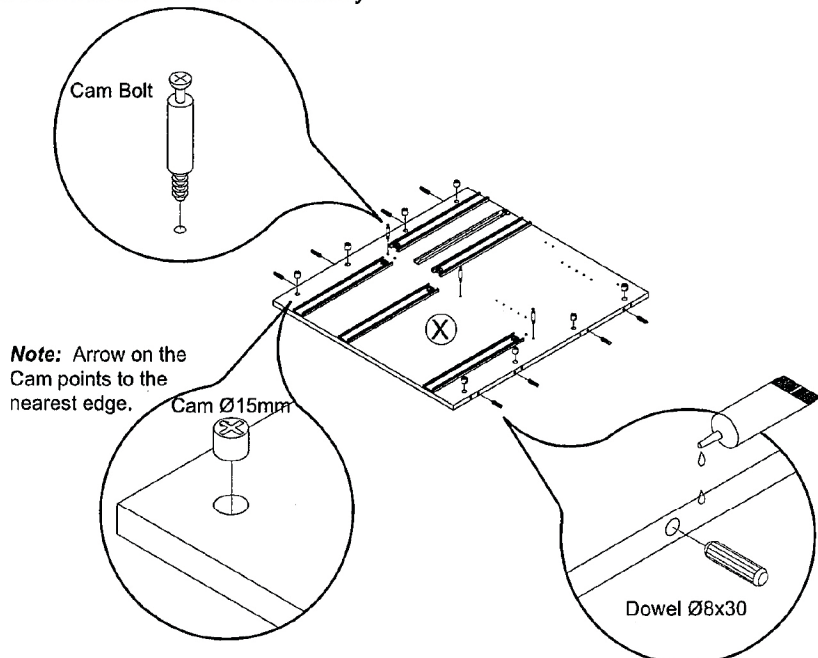

## 4. Right Hand End Pre-Assembly

 Cam Ø15mm (x8)


 Dowel Ø8x30mm (x8)

 Cam Bolt Ø30mm (x3)

### Assembly Steps


1. Press fit Cams into the End. Ensure the arrow on the Cam points to the nearest edge.
2. Place 2 to 3 drops of Glue in dowel holes in the End then tap Dowels into place.
3. Screw Cam Bolts into the smaller holes as shown.

**Note:** Arrow on the Cam points to the nearest edge.

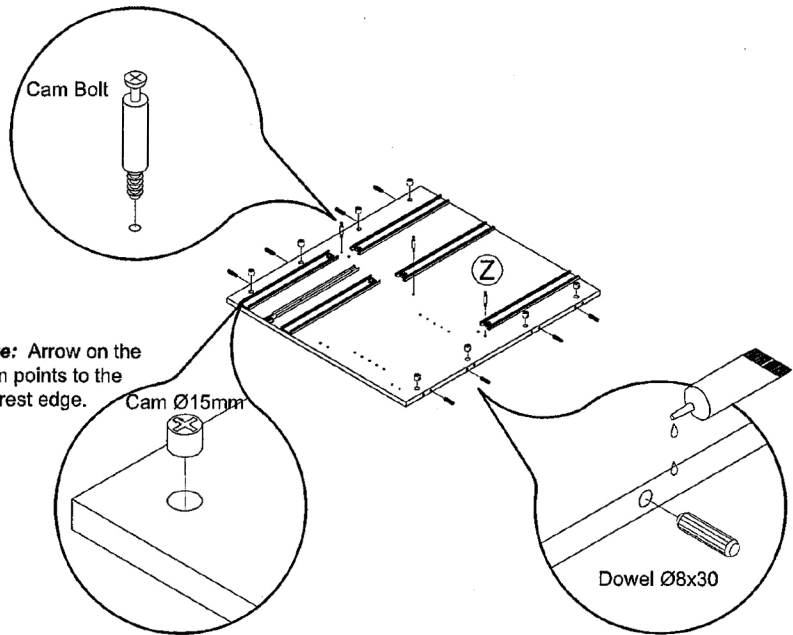


## 5. Division Pre-Assembly

 Cam Ø15mm (x10)

 Dowel Ø8x30mm (x8)

### Assembly Steps


1. Press fit Cams into the Division. Ensure the arrow on the Cam points to the nearest edge.

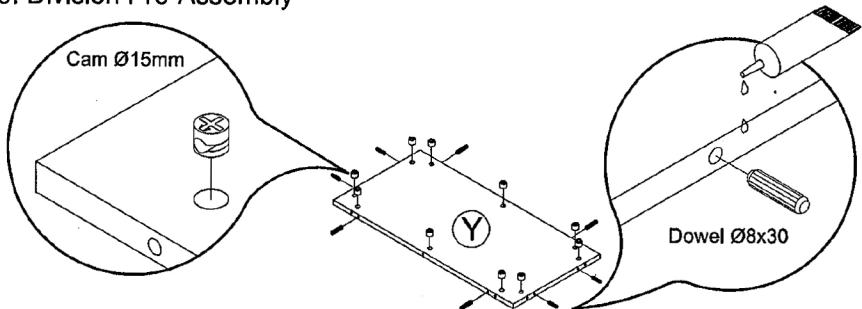


## 6. Door Pre-Assembly

 Bow Handle (x1)


 Handle Screw (x2)

 Hinge Stand (x2)

 Screw s1 Ø4x14mm (x4)

### Assembly Steps

1. Fit the Bow Handle using Handle Screws
2. Screw on Hinge Stand using Screw s1 Ø4x14mm C/S

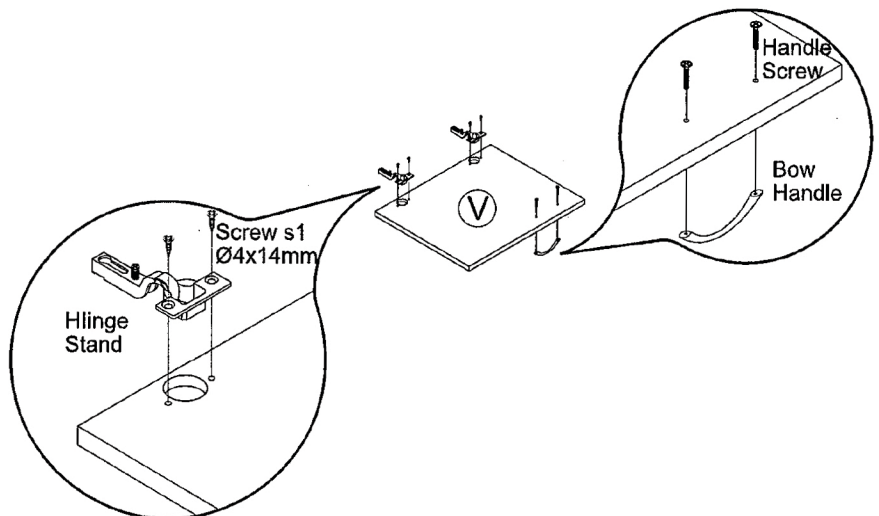



## 7. Back Flap Pre-Assembly



Magnet (x4)




Butt Hinge (x6)



Screw s1 Ø4 x 14mm (x26)

### Assembly Steps

1. Screw on Butt Hinge using Screw s1 Ø4 x 14mm.
2. Screw on Magnet using Screw s1 Ø4 x 14mm.

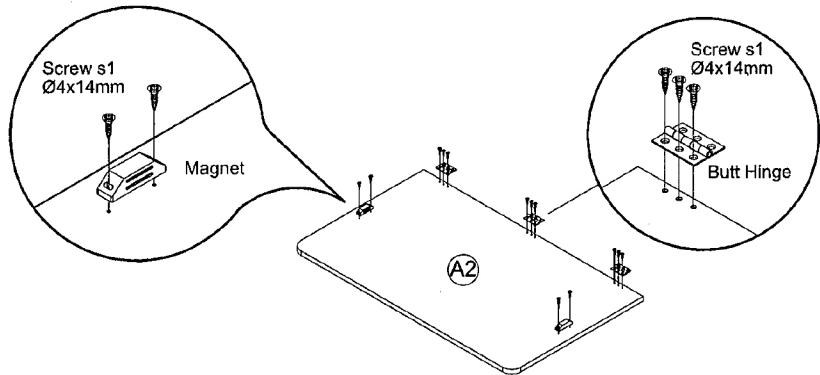

## 8. Gate Leg Pre-Assembly



Magnet (x4)



Butt Hinge (x8)



Screw s1 Ø4 x 14mm (x24)



Screw s2 Ø3 x 14mm (x8)




Gate Leg Button (x4)



Castor Ø50mm (x4)

### Assembly Steps

1. Tap in Gate Leg Button
2. Screw on Hinge using Screw s1 Ø4 x 14mm
3. Screw on Castor.
4. Screw on Magnet using Screw s2 Ø3 x 14mm.

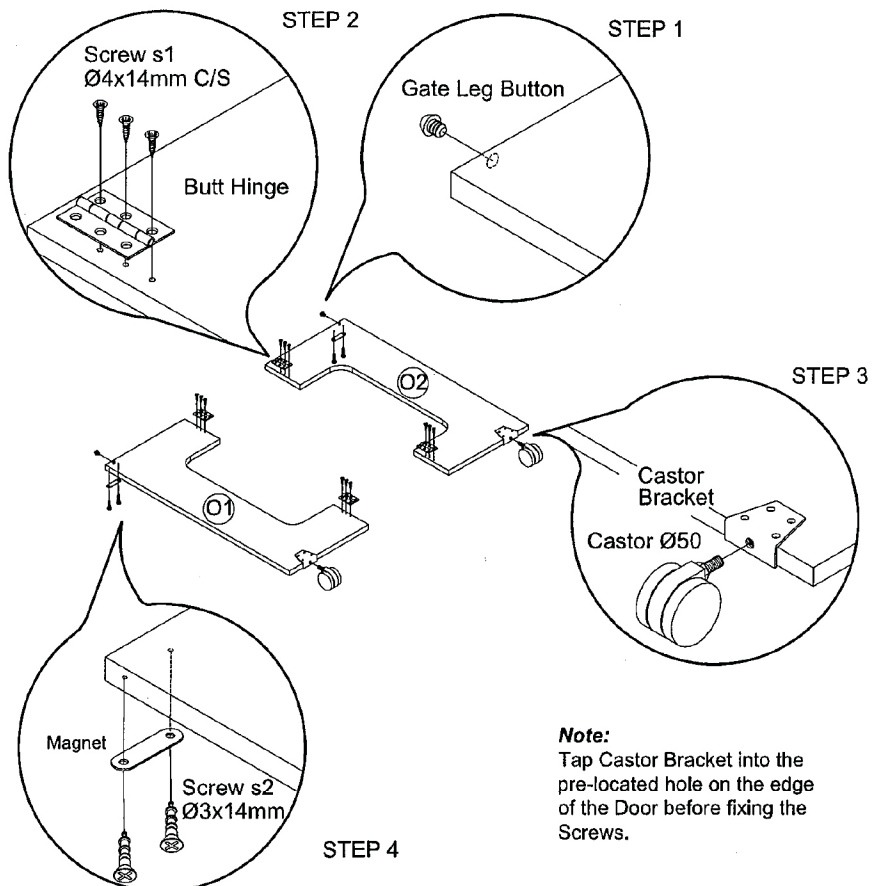

### Note:


Tap Castor Bracket into the pre-located hole on the edge of the Door before fixing the Screws.

## 9. Top, Bottom, Division, R/H End & L/H End Assembly


### Assembly Steps

1. Place 2 to 3 drops of Glue into the dowel holes in the End. Locate the Cam holes in the End over the Cam Bolts in the Division and insert. Secure by turning the Cam a half turn clockwise.
2. Place 2 to 3 drops of Glue into the dowel holes in the Top and Bottom. Locate the Cam holes in the End with Division over the Cam Bolts in the Bottom and insert. Secure by turning the Cam a half turn clockwise.


Step 1

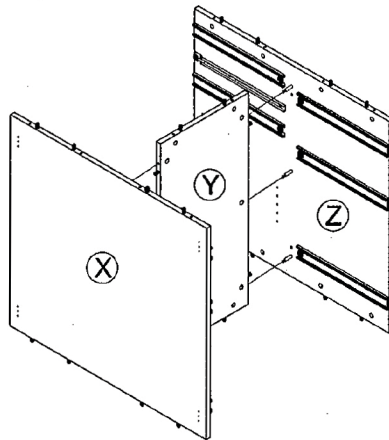


Step 2

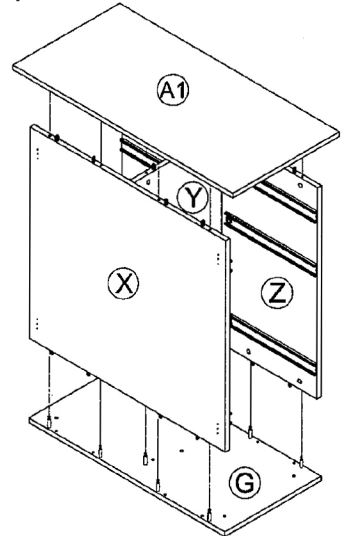


A. Insert Cam Bolt

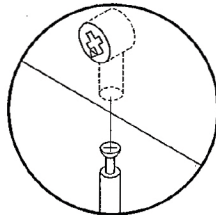


B. A half turn clockwise to tighten

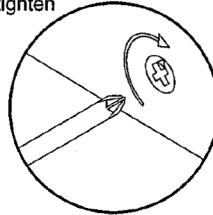

## 10. Castor Assembly



Castor Ø50mm (x3)




Castor Ø50mm (Lock) (x2)




Castor Washer (x5)

### Assembly Steps


1. Place the Castor Washer over the Castor thread and screw into the bottom 'T' nuts. Secure using the Spanner provided.
2. Carefully lift the cabinet upright. **Note:** This may require 2 people to perform safely.

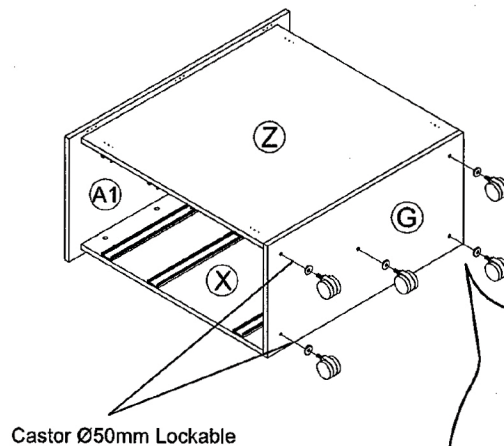

Castor Ø50mm Lockable

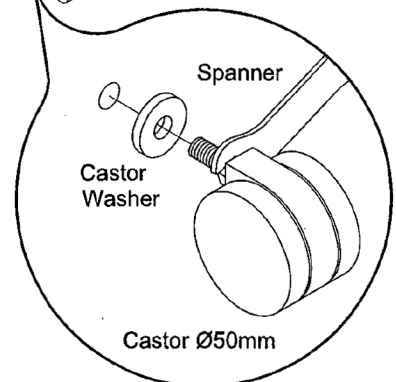


## 11. Back Flap Assembly


  
Screw s1 Ø4x14mm (x18)

### Assembly Steps

1. Fix the Back Flap to the Cabinet using Screw s1 Ø4x14mm C/S

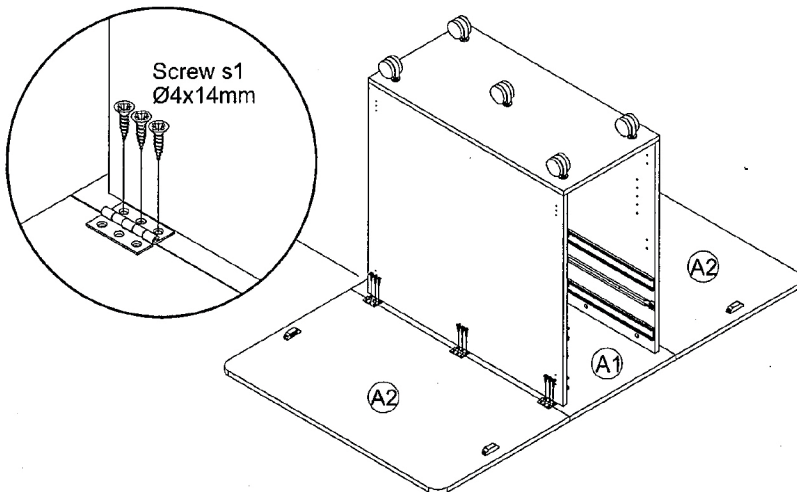

## 12. Gate Leg Assembly


  
Screw s1 Ø4 x 14mm (x24)

### Assembly Steps


1. Fix Gate Leg to the back of Cabinet using Screw s1 Ø4x14mm.
2. Swing Gate Leg against Back.
3. Roll Cabinet back over onto Castors

### Note:

It will require 2 people to lift and rotate Cabinet safely.


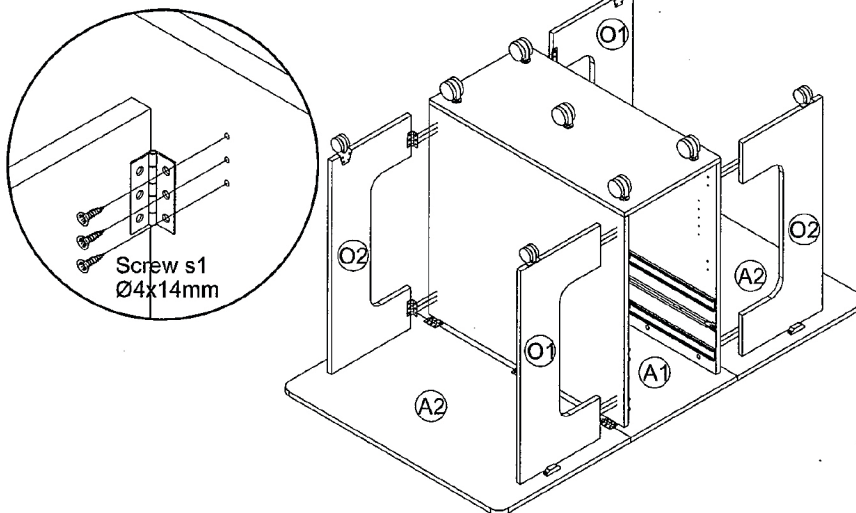


## 13. Drw Bottom Assembly




  
Dowel Ø6x50mm (x30)

### Assembly Steps

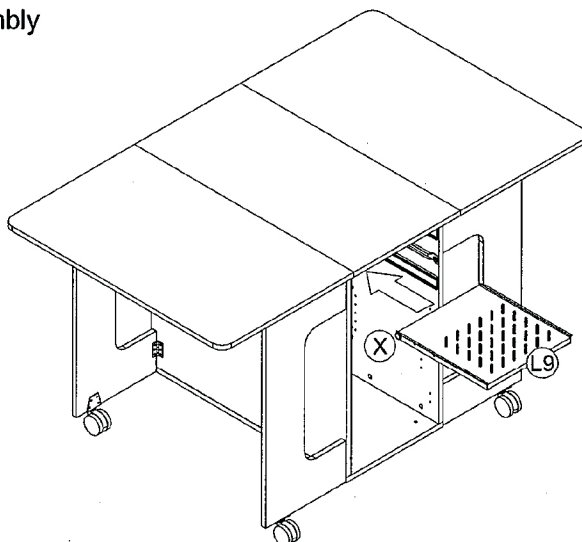1. Insert Dowel Ø6x50mm into the Drw Bottom.
2. Locate the Drw Bottom on the runners and slide into the Cabinet.




## 14. Drawer Pre-Assembly




-  Cam Ø15mm (x16)
-  Dowel Ø8x30mm (x12)
-  Cam Bolt Ø30mm (x16)


### Assembly Steps

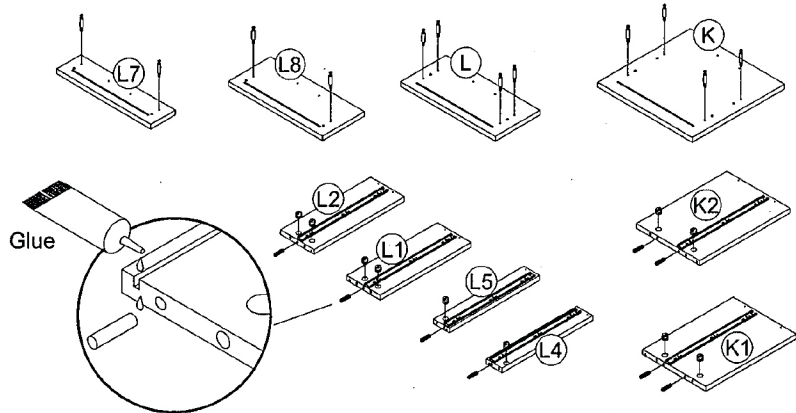1. Place 2 to 3 drops of glue in each dowel hole in the Drawer Sides and insert Dowels.
2. Screw the Cam Bolts into the Drawer Front as shown.
3. Insert Cams into the Drawer Sides ensuring the arrow points to the front edge.




## 15. Drawer Assembly

-  Bow Handle (x5)
-  Handle Screw (x10)
-  Screw s6 Ø3.5 x 35mm (x20)

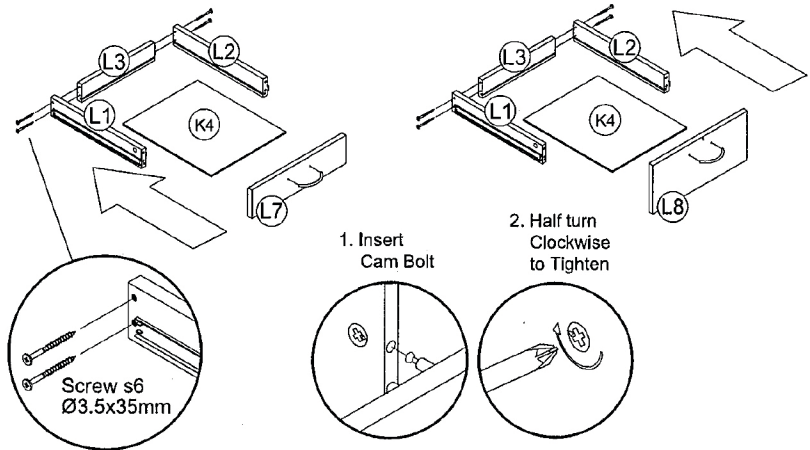

### Assembly Steps


1. Secure L/H & R/H Drawer Sides to Drawer Back using Screw s6 Ø3.5x35mm.
2. Slide Drawer Bottom into the Drawer Side groove.
3. Place 2 to 3 drop of glue in the dowel holes in Drawer Front. Locate the Drawer Front and secure by turning the Cam a half turn clockwise.
4. Fix Handle onto Drawer Front using screws supplied.

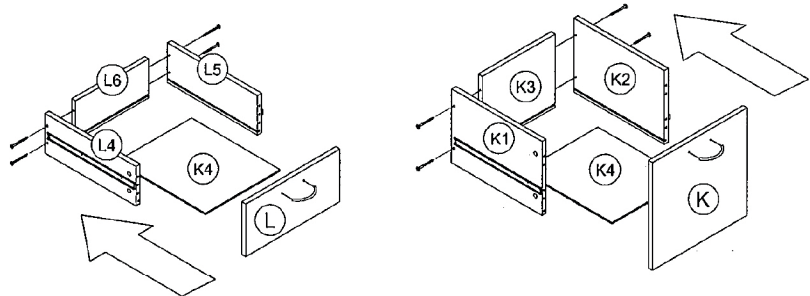

## 16. Drawer Assembly

### Assembly Steps

1. Locate the Drawer on the runners and slide into Cabinet.

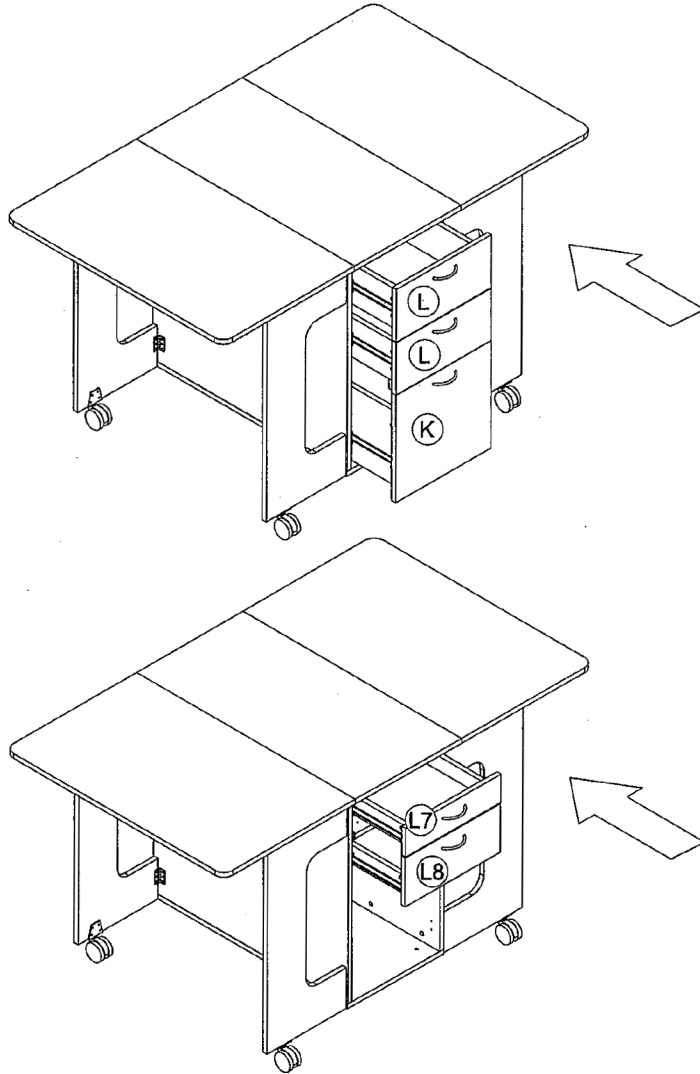


## 17. Shelf Assembly



Threaded Dowel Pin(x4)

### Assembly Steps

1. Locate the Shelf on the Threaded Dowel Pin into Cabinet.

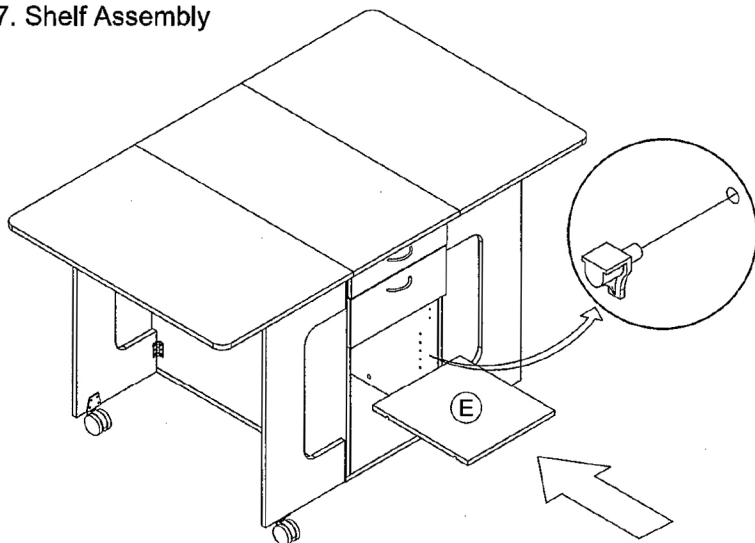

## 18. Door Assembly



Screw s1 Ø4x14mm (x8)

### Assembly Steps

1. Screw on Hinge Stand into Cabinet using Screw s1 Ø4x14mm C/S

