




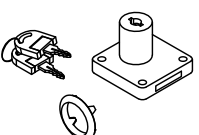


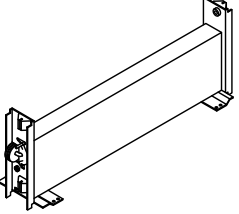






KENSINGTON ASSEMBLY INSTRUCTIONS


COMPONENTS	DESCRIPTION	QTY
c1	 Cam Bolt 30mm	31
c3	 Cam Ø15mm	27
c4	 Cam Ø15x10mm	4
c2	 Cover	31
d1	 Dowel Ø8 x 30mm	28
s1	 Screw Ø4x14mm C/S	70
s2	 Screw Ø3x14mm C/S	24
s3	 Screw Ø3.5x20mm C/S	10
s4	 Screw Ø4 x 25mm C/S	2
s5	 Screw Ø3.5 x 30mm	4
s6	 Screw Ø4 x 45mm	4
g1	 Castor Washer	5
t2	 Castor Ø50	5
t1	 Castor Ø50 Lockable	3
r3	 Castor Spanner	1
g2	 Button (Gate Leg)	1
h4	 Flap Hinge	3
h3	 Butt Hinge	2
h2	 Flush Hinge (52mm)	6
h1	 Bow Handle	2
b2	 Handle Screw	4
L2	 Lock Striker	1
	 Glue Bottle	2
L1	 Lock & Key & Escutcheon	1

COMPONENTS	DESCRIPTION	QTY
	Insert Holder	1
	Lifter Rail (Right)	1
	Lifter Rail (Left)	1
	Lifter (692mm)	1
	Stay Arm Bracket	1
	Door Plate	2
	Box Bracket	4
	Door Bucket	2
	Scissors Box	1
	Square Bracket	8
	Circular Bracket	1
	Toolbox	2
	Plastic Handle	1
	Stay Arm (Long)	1
	Equalizer	2
	Ramp	3
	Basket Insert	1
	Pin Cushion Foam	2


KENSINGTON ASSEMBLY INSTRUCTIONS

KENSINGTON PANELS AND THEIR DESCRIPTIONS


Note: Hole positions helps with panel orientation.

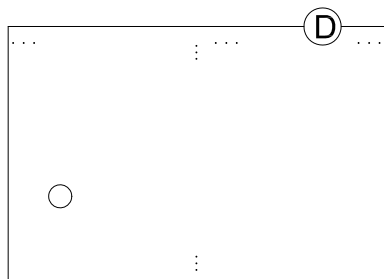


BACK

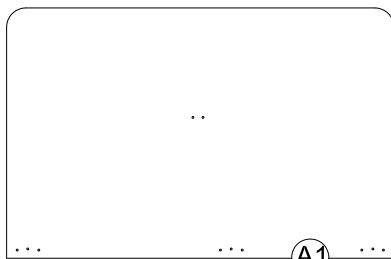

BACK FLAP

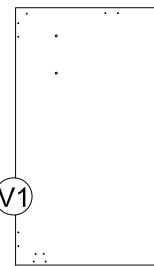


SMALL DOOR

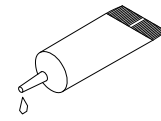


Before assembling place 2 to 3 drops of glue in each dowel hole.


Do Not place glue in Cam or Cam Bolt holes.

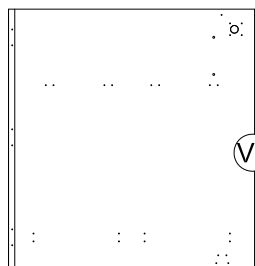


LARGE DOOR

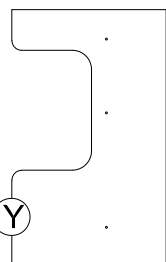


DIVISION

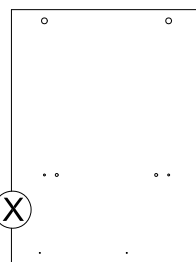


L/H END

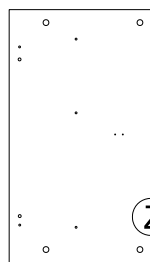


R/H END

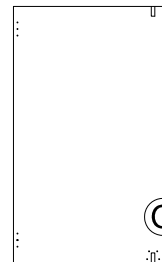


GATE LEG




LIFTER BOARD




R/H Side




Back




L/H Side

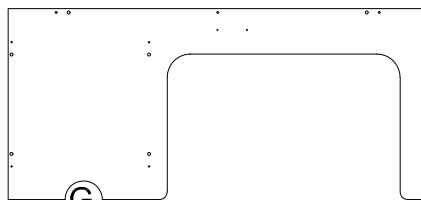


BOTTOM

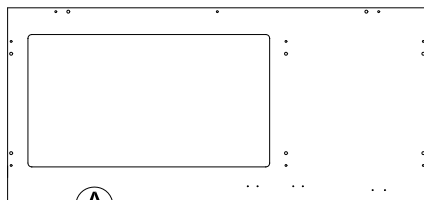


TOP / FLAPS

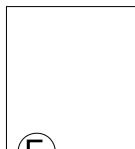


SHELF



DRAWER FRONT

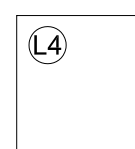

DRAWER BASE




DRAWER SIDE

1. Top/Flap Pre-Assembly



Cam Bolt (x9)

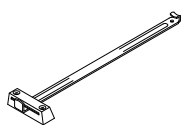

Stay Arm



Ramp (x2)




Screw s4 Ø4 x 25mm C/S(x2)






Screw s3 Ø3.5x 20mm C/S(x4)

Assembly Steps

1. Screw the Cam Bolts into the Top panels as shown.
2. Fix the Ramps to the Top using Screw s3 Ø3.5 x 20mm
3. Fix the Stay Arm to the Top using Screw s4 Ø4 x 25mm

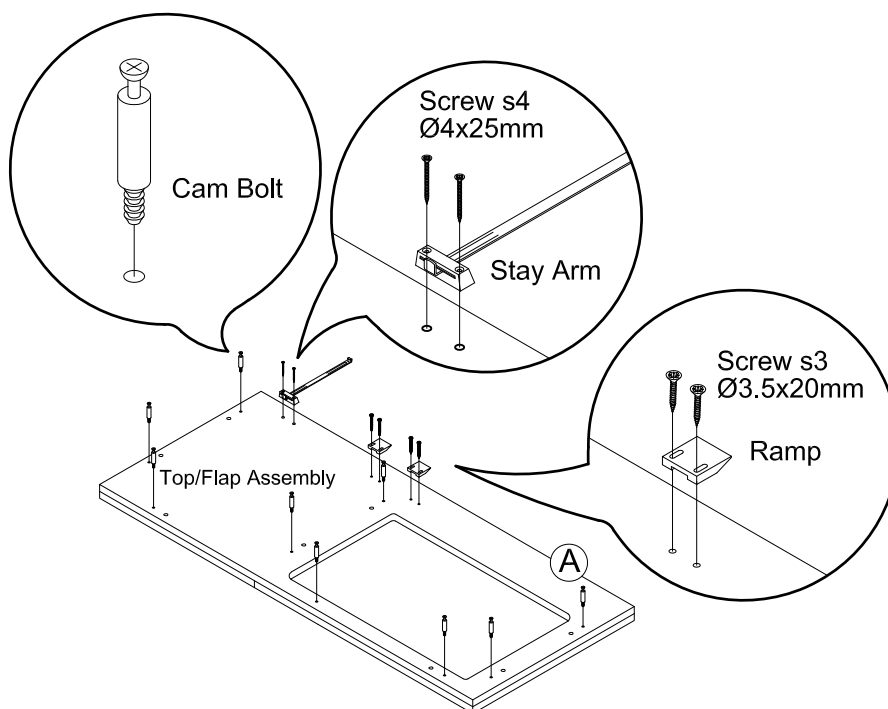


2. Bottom Pre-Assembly


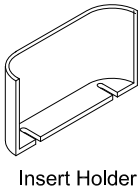
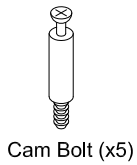


Assembly Steps

1. Screw Cam Bolts into Bottom as shown
2. Fix Insert Holder to Bottom using Screw s1 Ø4x14mm C/S

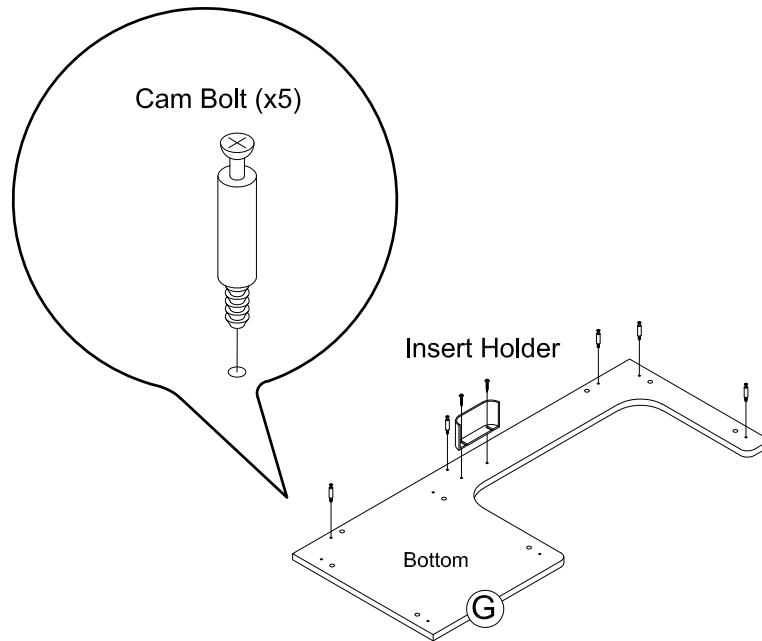

3. R/H End Pre-Assembly




Assembly Steps

1. Insert Dowels using 2 to 3 drops of Glue into each end.
2. Place Cams into holes shown
3. Screw R/H Lifter Rail onto End using Screw s1 Ø4x14mm C/S
4. Screw Cam Bolts into the smaller holes as shown.
5. Locate Circular Bracket and secure using Screw s1 Ø4 x 14mm
6. Insert Scissors Box into Circular Bracket

Note:

Lifter Rail will be level with the panel edge.

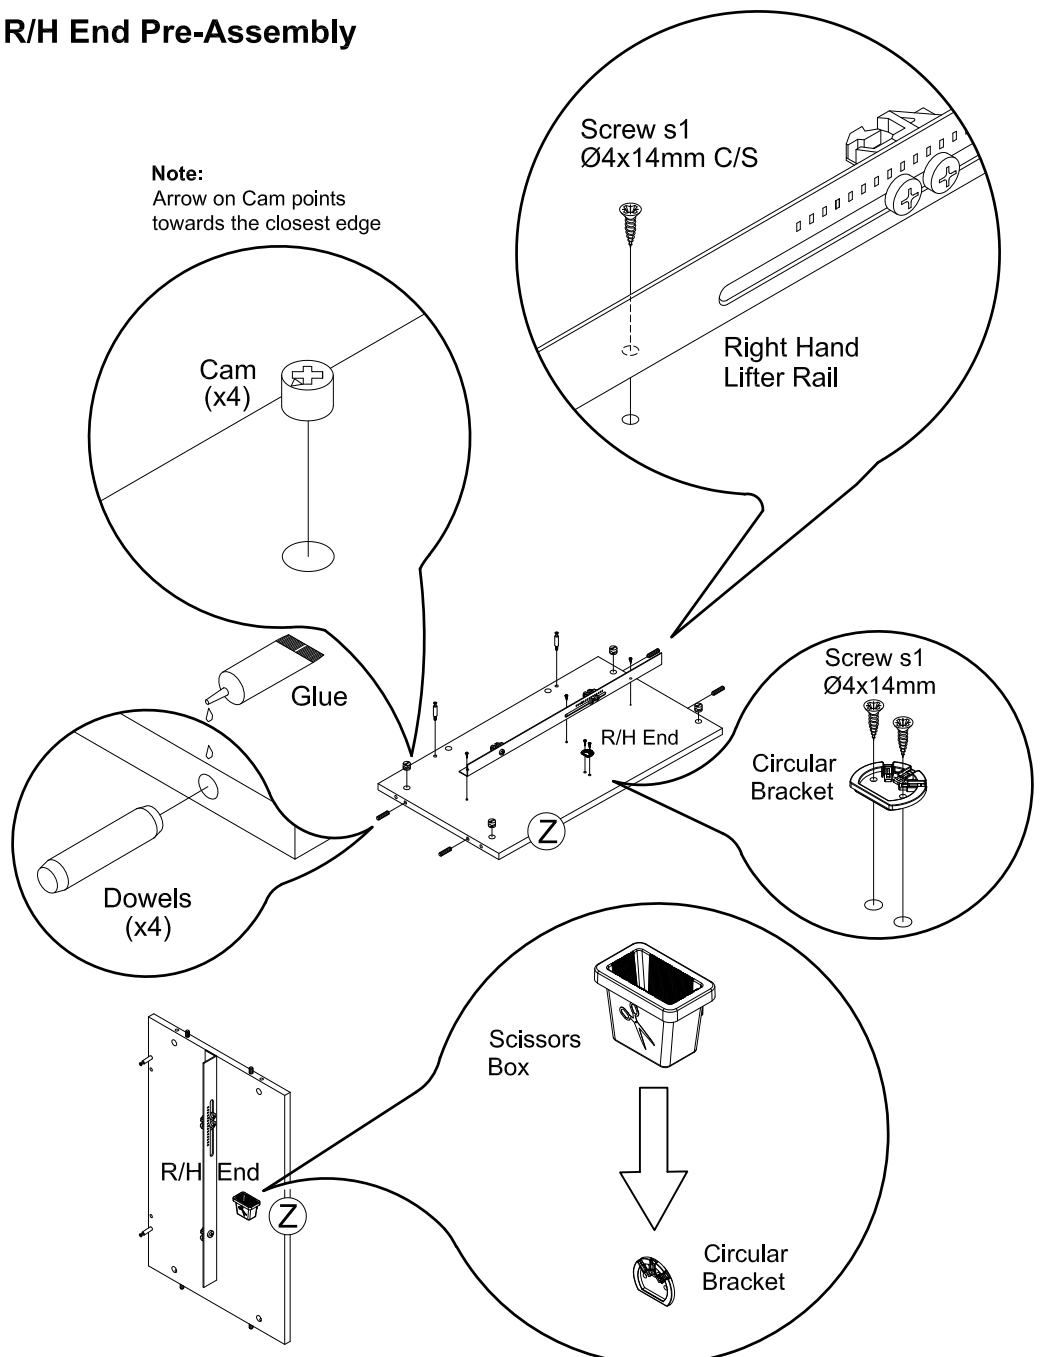


4. Division Pre-Assembly



Cam (x4)



Dowel (x6)

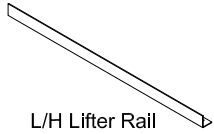


L/H Lifter Rail



Lock Striker



Screw s1 Ø4x14mm C/S (x5)




Cam Bolt (x2)

Assembly Steps

1. Press fit Cams into the Division. Ensure the arrow on the Cam points to the closest edge.
2. Place 2 to 3 drops of glue in the dowel holes in the Division then tap Dowels into place.
3. Screw Cam Bolts into Bottom as shown
4. Screw on R/H Lifter Rail using Screw s1 Ø4x14mm C/S
5. Screw on Lock Striker using Screw s1 Ø4x14mm C/S

Note:

Rail will be level with panel edge

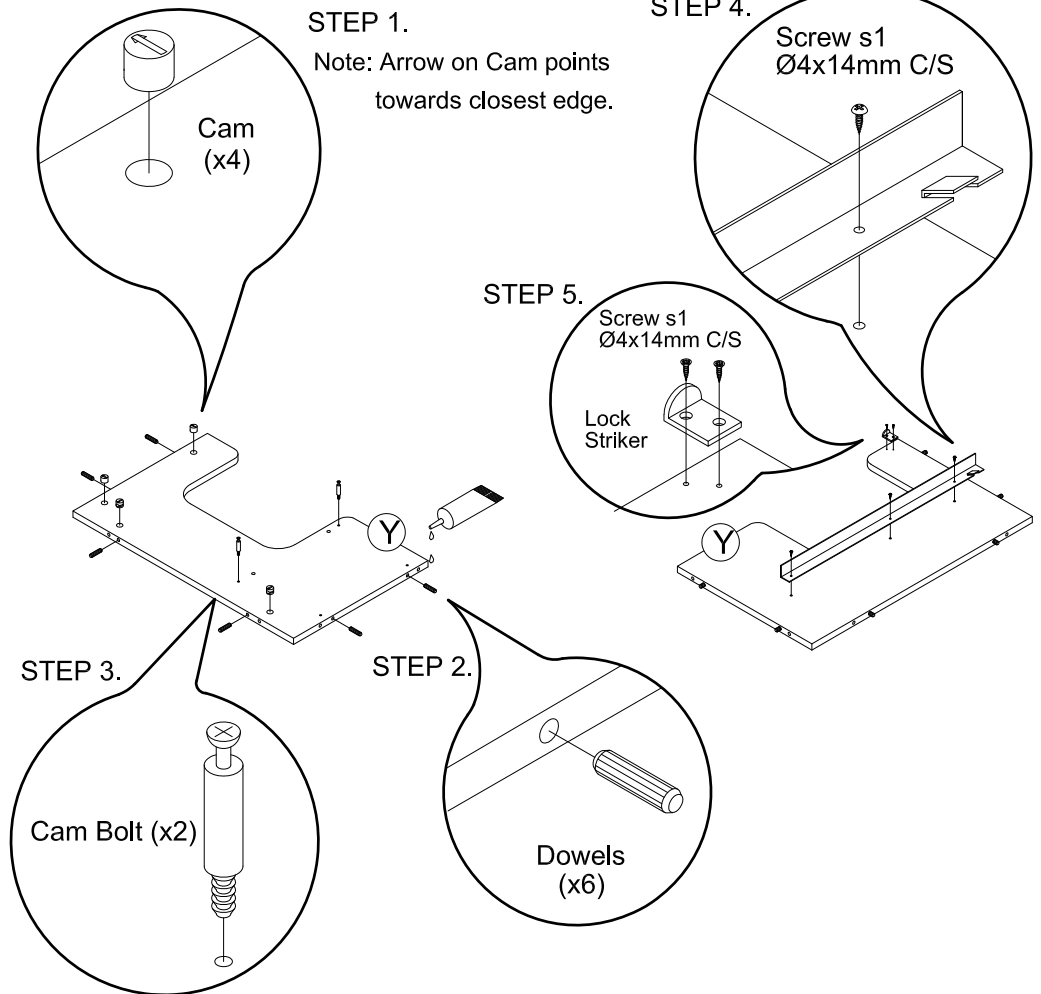

5. L/H End Pre-Assembly



Cam (x2)




Dowel (x4)



Cam Bolt (x4)

Assembly Steps

1. Press fit Cams in the L/H End. Ensure the arrow on the Cams points to the nearest edge.
2. Place 2 to 3 drops of Glue in the dowel holes and insert the Dowels.
3. Screw Cam Bolts into Bottom as shown

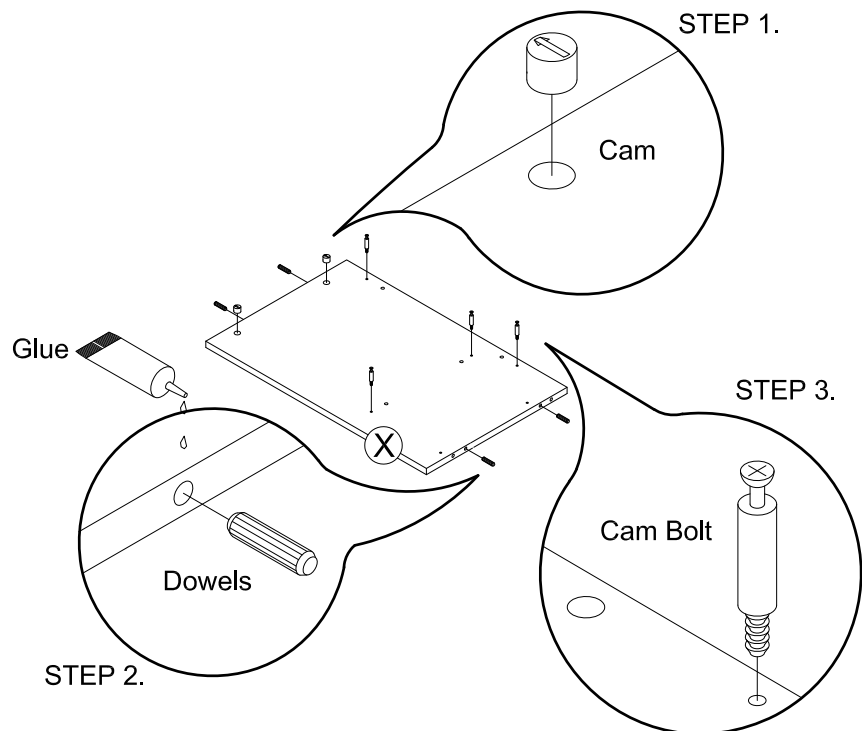

6a. Large Door Pre-Assembly




Flush Hinge (52mm)




Cam Bolt (x3)



Castor Ø50 Locking



Equalizer



Lock



Screw s1 Ø4x14mm C/S (x1)



Screw s2 Ø3x14mm C/S (x6)



Screw s3 Ø3.5 x 20mm C/S (x4)







Cam (x3)




Dowel (x2)

Assembly Steps


1. Press fit Cams into the Stud. Ensure the arrow on the Cam points to the nearest edge.
2. Place 2 to 3 drops of Glue in dowel holes in the Stud then tap Dowels into place.
3. Screw Cam Bolts into the smaller holes as shown.
4. Place 2 to 3 drops of Glue into the dowel holes in the Door. Locate the Cam holes in the Stud over the Cam Bolts in the Door and insert. Secure by turning the Cam a half turn clockwise.
5. Screw on Flush Hinge using Screw s2 Ø3x14mm C/S
6. Screw on Castor Ø50 Locking
7. Screw on Equalizer using Screw s1 Ø4x14mm C/S
8. Screw on Lock using Screw s3 Ø3.5x20mm C/S

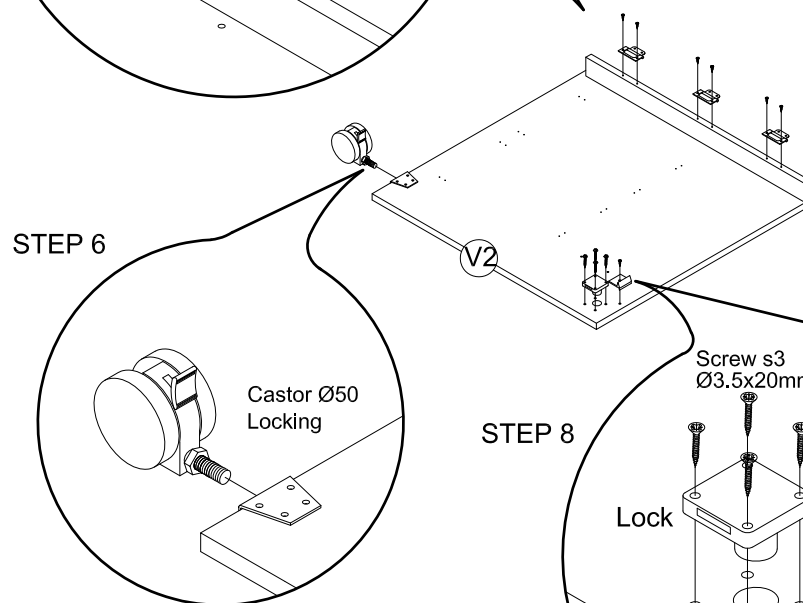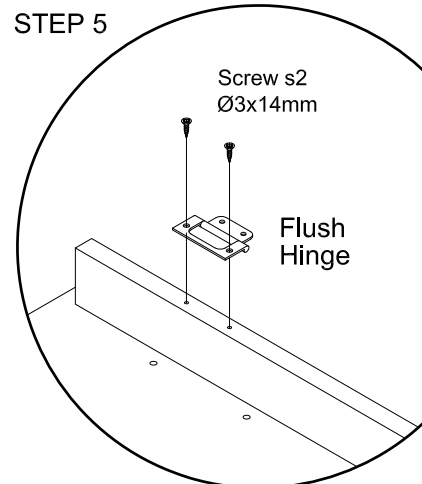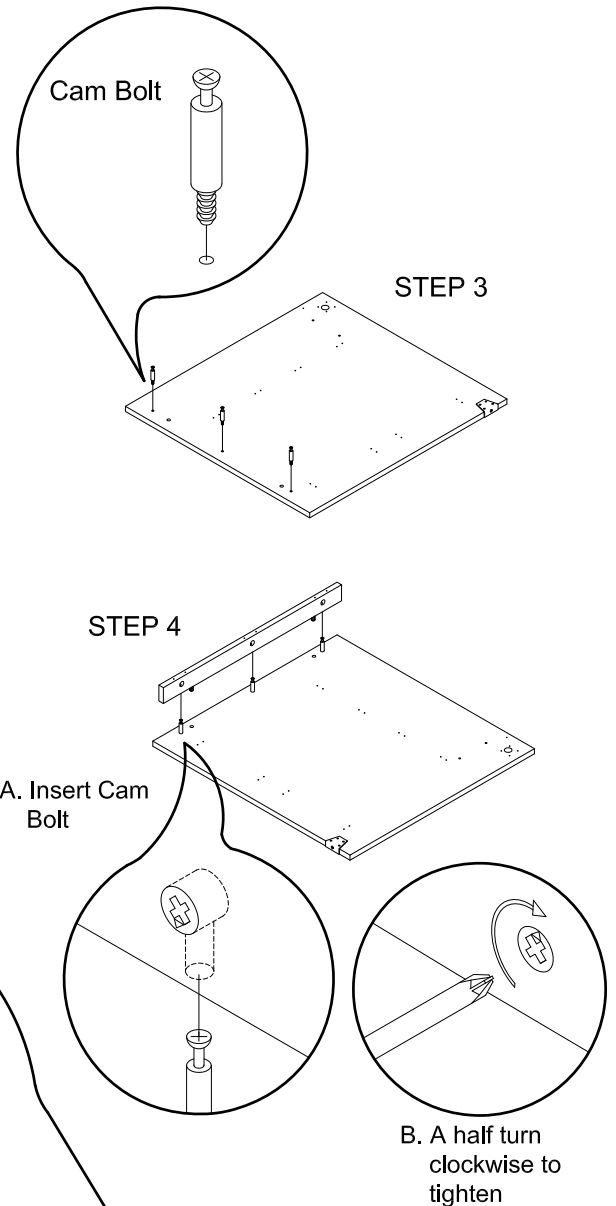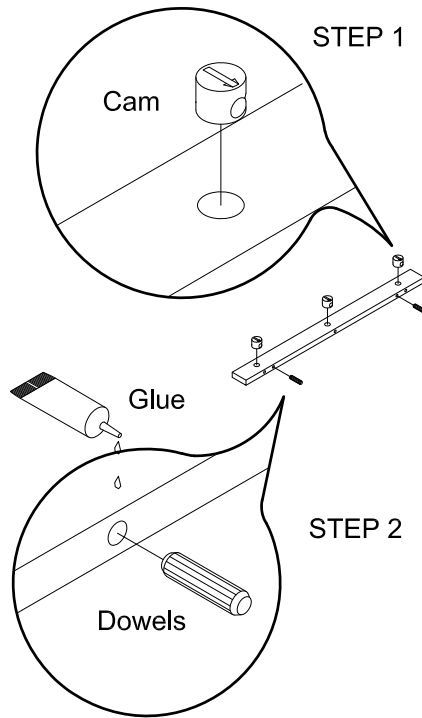

Note:
Tap Castor Bracket into the hole in the edge of the Door before inserting screws.

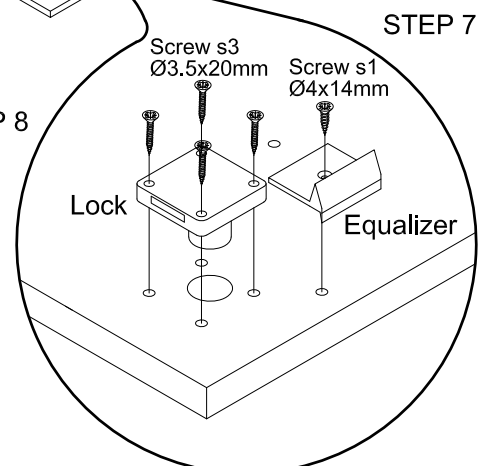


6b. Large Door Pre-Assembly



Square Bracket (x8)



Screw s1 Ø4x14mm (x16)




Box Bracket (x4)

Assembly Steps


1. Screw on Square Bracket to Door Shelf using Screw s1 Ø4 x 14mm.
2. Insert Box Bracket assembly into the Door Bracket

Step 1


Screw s1
Ø4x14mm



Square
Bracket

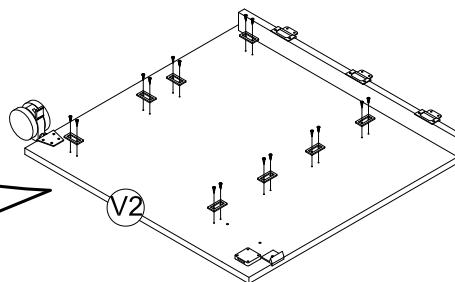


V2

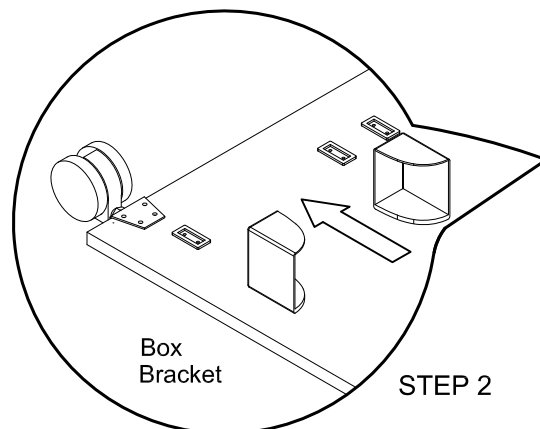


Box
Bracket

STEP 2

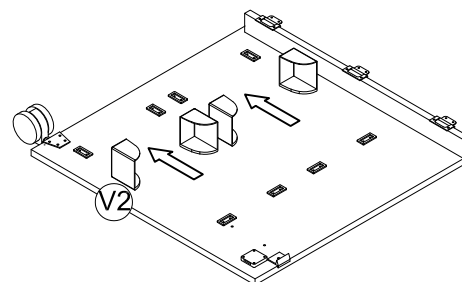


V2

6c. Large Door Pre-Assembly

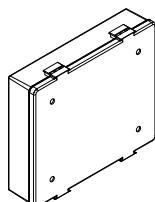

Toolbox (x2)

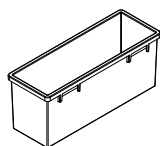


Door Bucket (x2)


Assembly Steps

1. Put the Toolbox into the Box Bracket
2. Insert Door Bucket into the Square Bracket


STEP 1

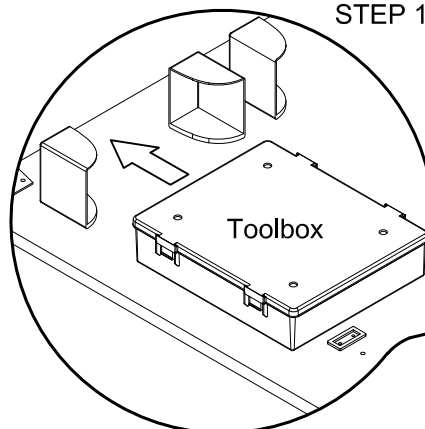


Toolbox

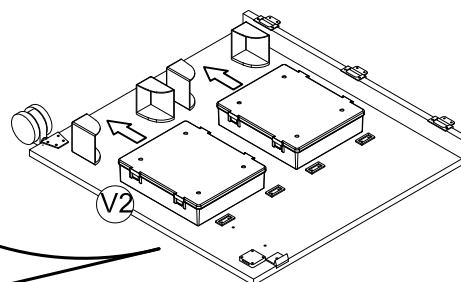

V2

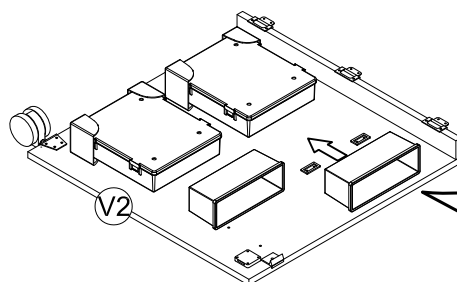


V2

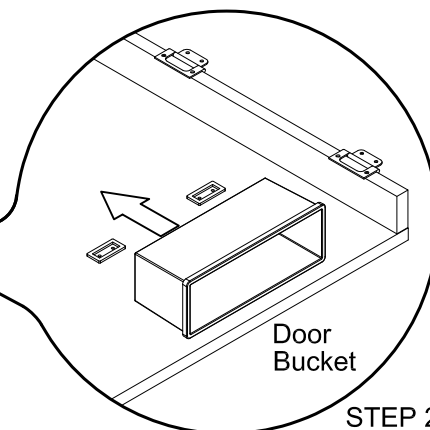

Door
Bucket


STEP 2

7. Small Door Pre-assembly

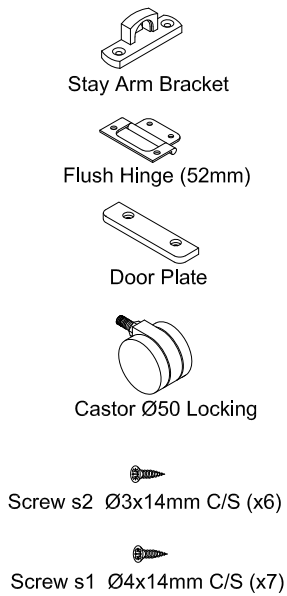


Assembly Steps

1. Screw on Stay Arm Bracket using Screw s1 Ø4 x 14mm
2. Screw on Flush Hinge using Screw s2 Ø3 x 14mm C/S
3. Screw on Castor (Lockable)
4. Screw on Equalizer using Screw s1 Ø4 x 14mm C/S
5. Screw on Door Plates using Screw s1 Ø4 x 14mm C/S

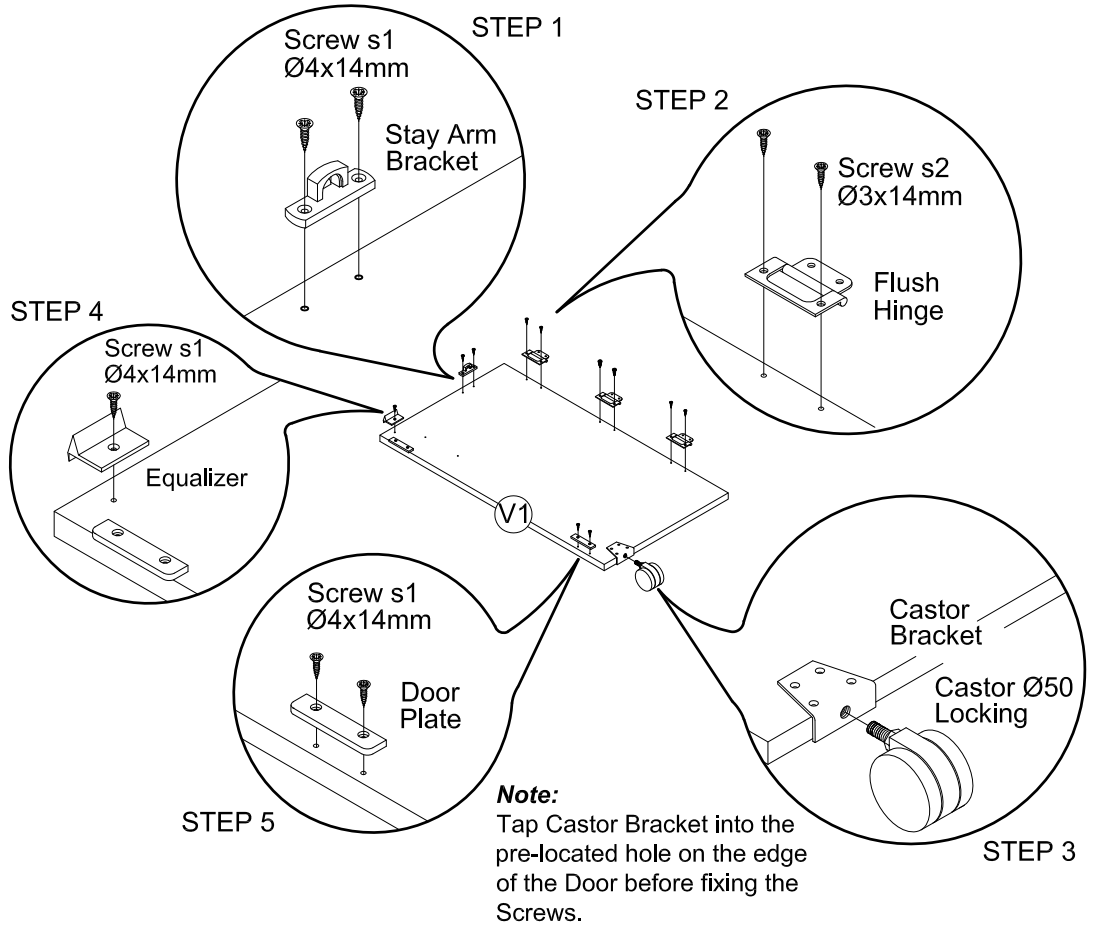


8. Back Flap Pre-assembly

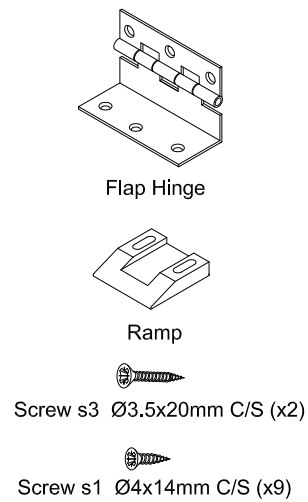

Assembly Steps

1. Screw on Flap Hinge using Screw s1 Ø4 x 14mm C/S
2. Screw on Ramp using Screw s3 Ø3.5 x 20mm C/S

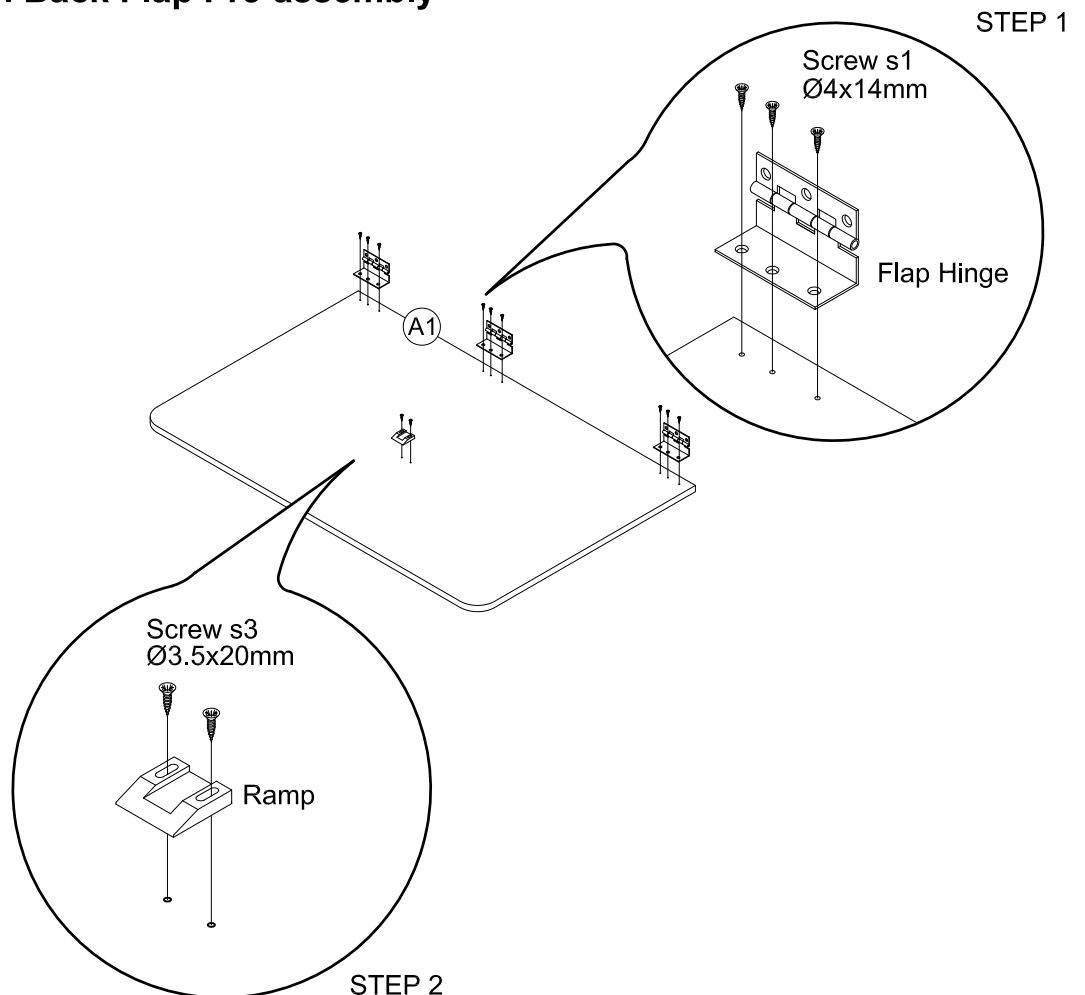

9. Gate Leg Pre-assembly

Gate Leg Button


Butt Hinge

Castor Ø50 Locking

Screw s1 Ø4x14mm C/S (x6)

Assembly Steps

1. Tap in Gate Leg Button
2. Screw on Hinge using
Screw s1 Ø4 x 14mm C/S
3. Screw on Castor (Locking)

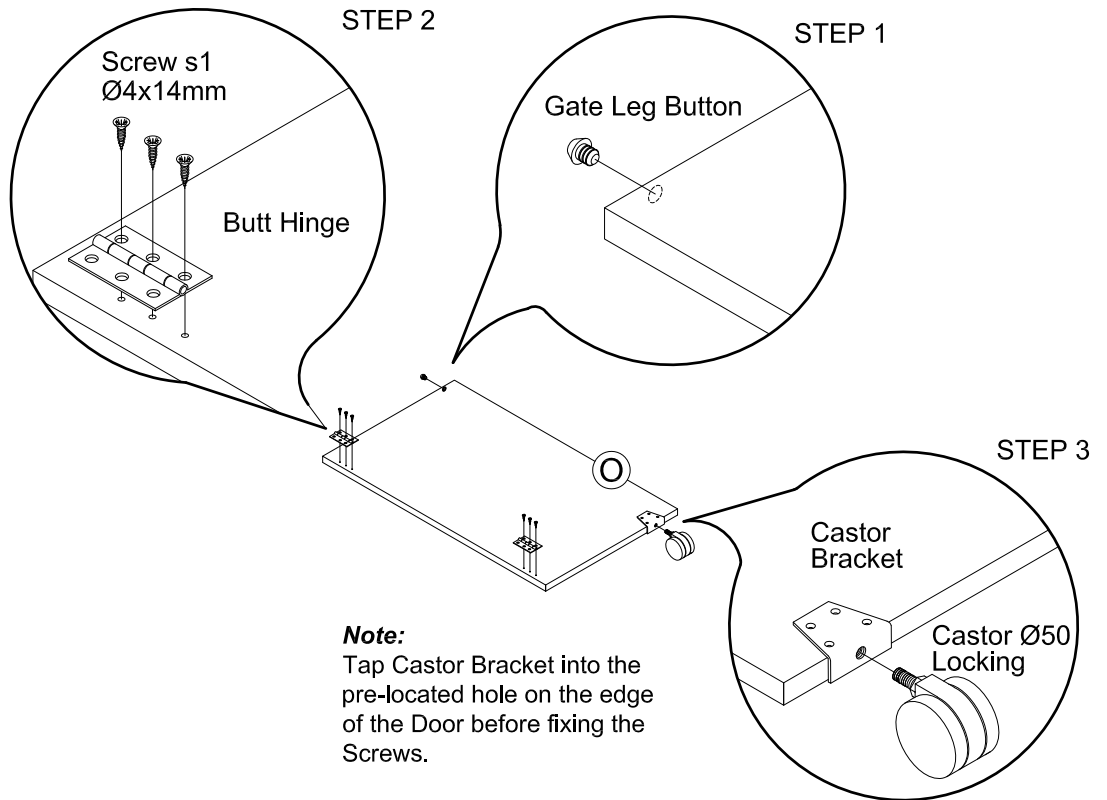

10. Lifter / Lifter Board Pre-assembly

Dowel (x 4)

Lifter Board

Lifter

Lifter

Lifter

Cam (x4)


Screw s1 Ø4x14mm C/S (x4)

Assembly Steps



1. Press fit Cams into the Shelf.
Ensure the arrow on the Cam points to the closest edge.
2. Insert Dowels into Shelf using
2 to 3 drops of glue in each hole
3. Screw the Lifter to the Lifter
Board using
Screw s1 Ø4 x 14mm C/S

Note:

Lifter orientation on Lifter Board

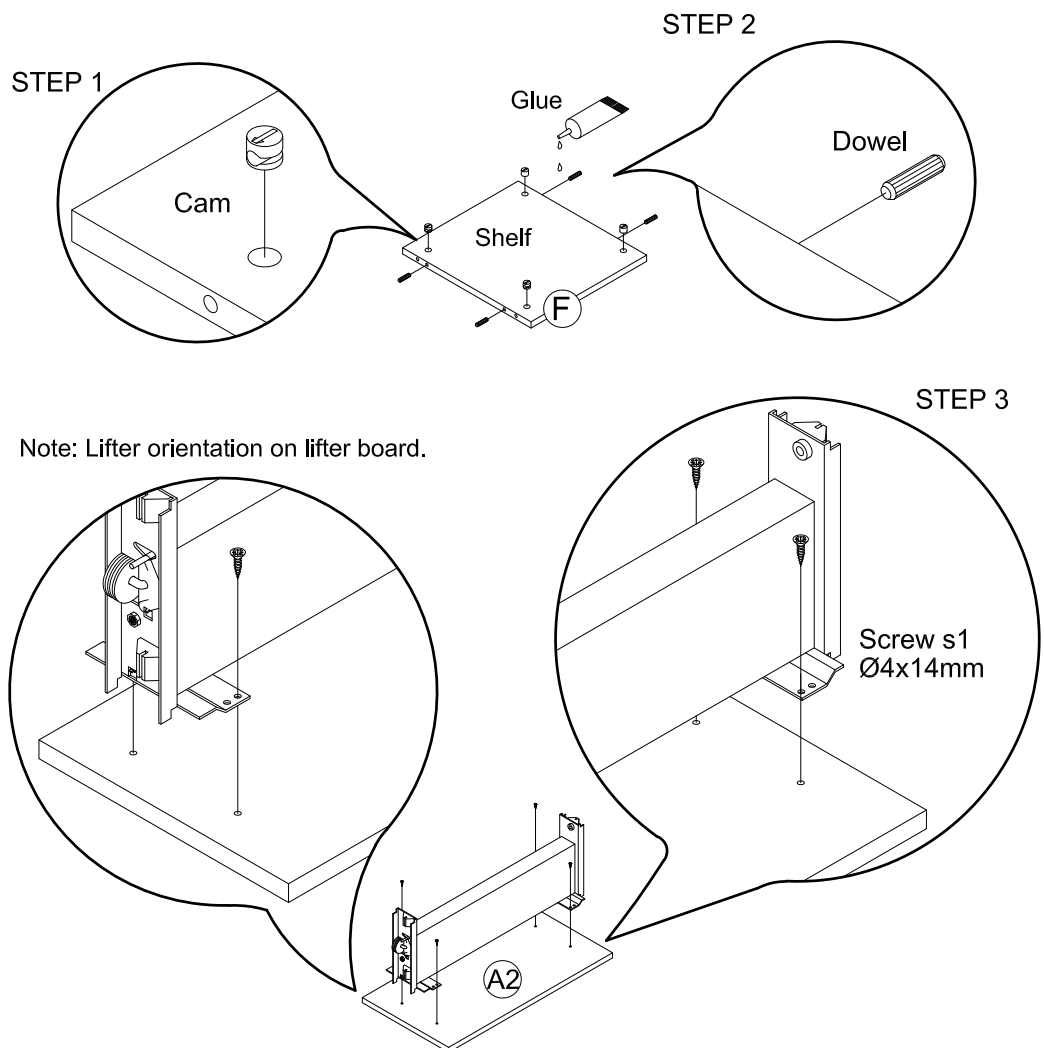

11. Back Pre-Assembly

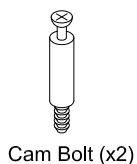

Assembly Steps

1. Press fit Cams into the Back.
Ensure the arrow on the Cam points to the nearest edge.
2. Place 2 to 3 drops of glue in the dowel holes in the Back then tap Dowels into place.
3. Screw Cam Bolts into Back as shown

STEP 3.

Cam Bolt (x2)

STEP 1.

Cam


STEP 2.

Dowels (x8)


Back

12a. Cabinet Assembly


STEP 1.

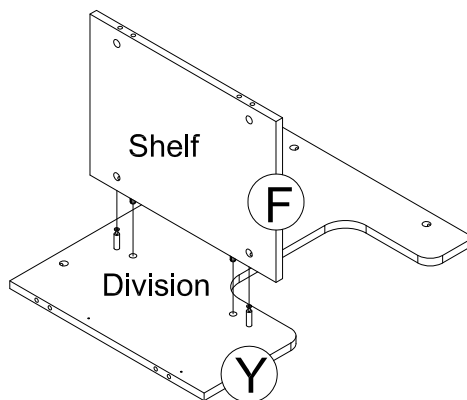


A. Insert Cam Bolt

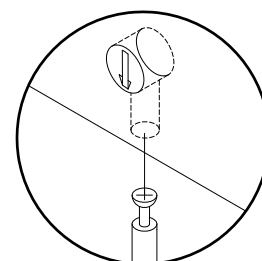

B. Half turn Clockwise to Tighten.

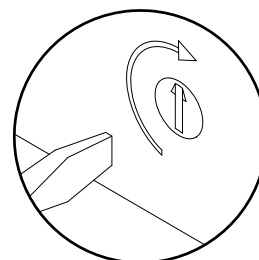


STEP 2.

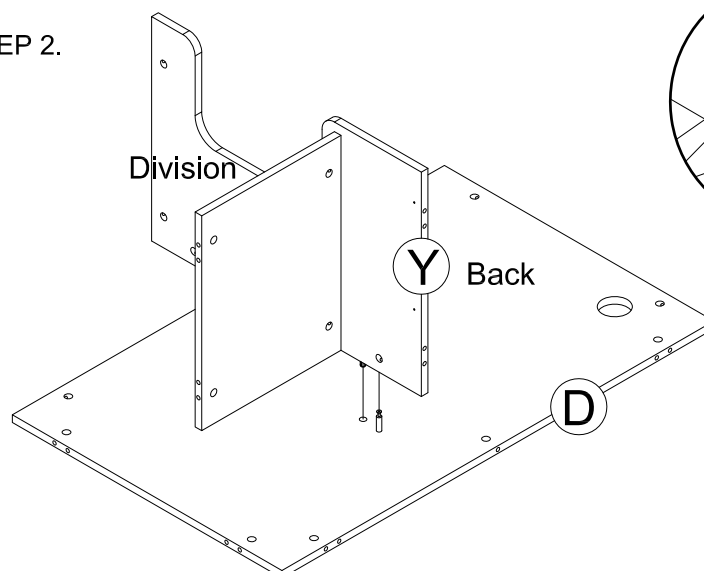



Assembly Steps

1. Place 2 to 3 drops of glue into dowel holes in the Division insert Shelf.
2. Place 2 to 3 drops of Glue in the dowel holes in the Back. Insert Division onto Back Cam Bolts and tighten.

12b. Cabinet Assembly

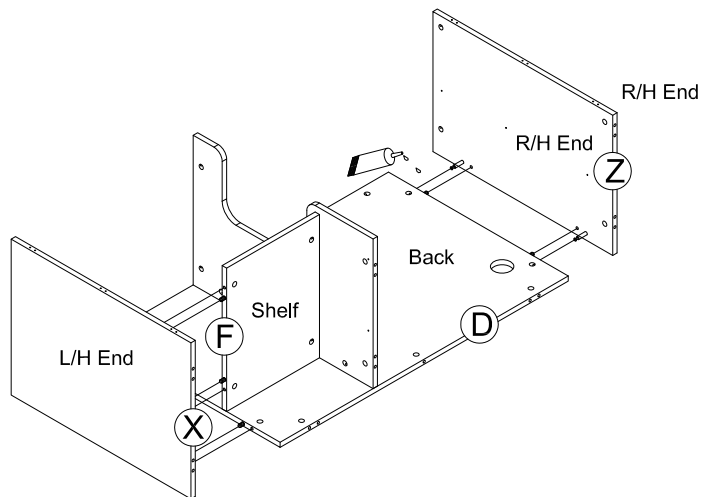

A. Insert Cam Bolt

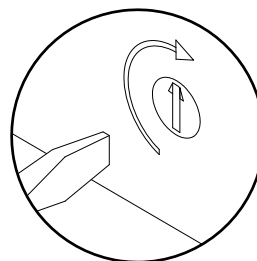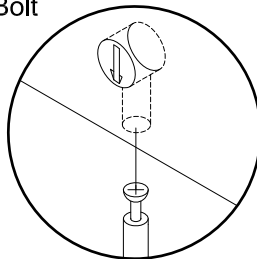


B. Half turn Clockwise to Tighten.



Assembly Steps

1. Place 2 to 3 drops of Glue in the dowel holes in the R/H End & L/H End. Insert Back onto R/H End Cam Bolts and tighten. Insert Back & Shelf onto L/H End Cam Bolts and tighten.

12c. Cabinet Assembly

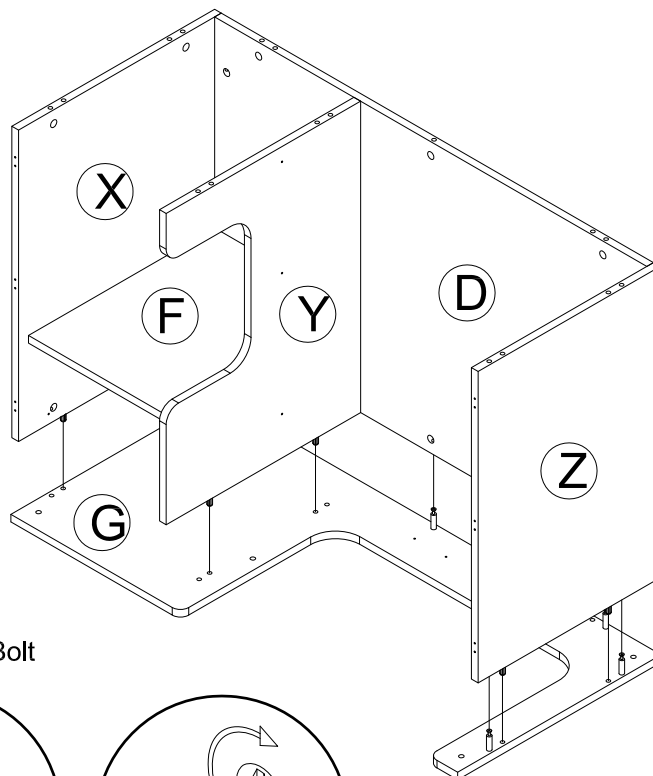

A. Insert Cam Bolt

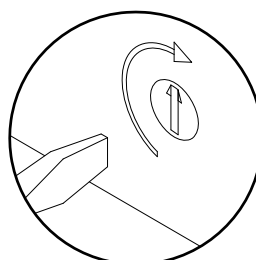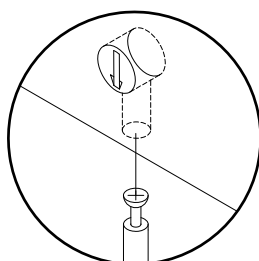

B. Half turn Clockwise to Tighten.

Assembly Steps

1. Place 2 to 3 drops of glue in the dowel hole in the Bottom. Insert L/H End & Division onto Bottom. Fit Back & R/H End onto Bottom Cam Bolts and secure by turning Cams a half-turn clockwise.

13a. Lifter / Cabinet Assembly

Step 1.

B.

A.

Plastic Guide

Assembly 10

Cabinet Assembly

Lifter Board Assembly

Assembly Steps

1. Position Lifter guides over Rails and gently slide the Lifter into position.

Note:

Ensure all 4 plastic guides (2 on each side) are positioned correctly.

13b. Lifter Cable Attachment

Lifter Rail

Cable

Assembly Steps


1. Loop Cable through Metal Tab on Lifter Rails & secure.
2. Push Lifter down and click into first stop position.

Note:


When the Lifter is clicked into this first stop position a small block of timber will disengage from the rear of the Lifter.

Discard block

14. Top & Cabinet Assembly

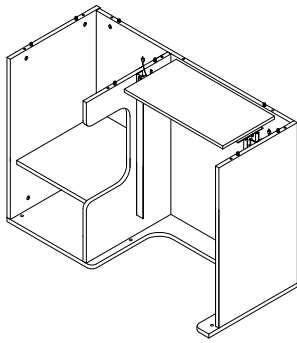

Assembly 13

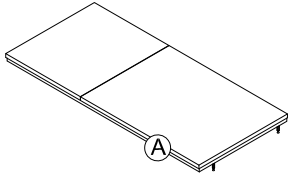


Top / Flaps

Assembly Steps


1. Place 2 to 3 drops of Glue into each Dowel hole.
2. Position the Top Panel Assembly over the Cabinet Assembly locating the Cam Bolts and Dowels.
3. Secure by rotating Cams a half turn clockwise.
4. Rotate Cabinet onto its Back and then Top carefully.

Note:


It will require 2 people to lift and rotate cabinet onto its top

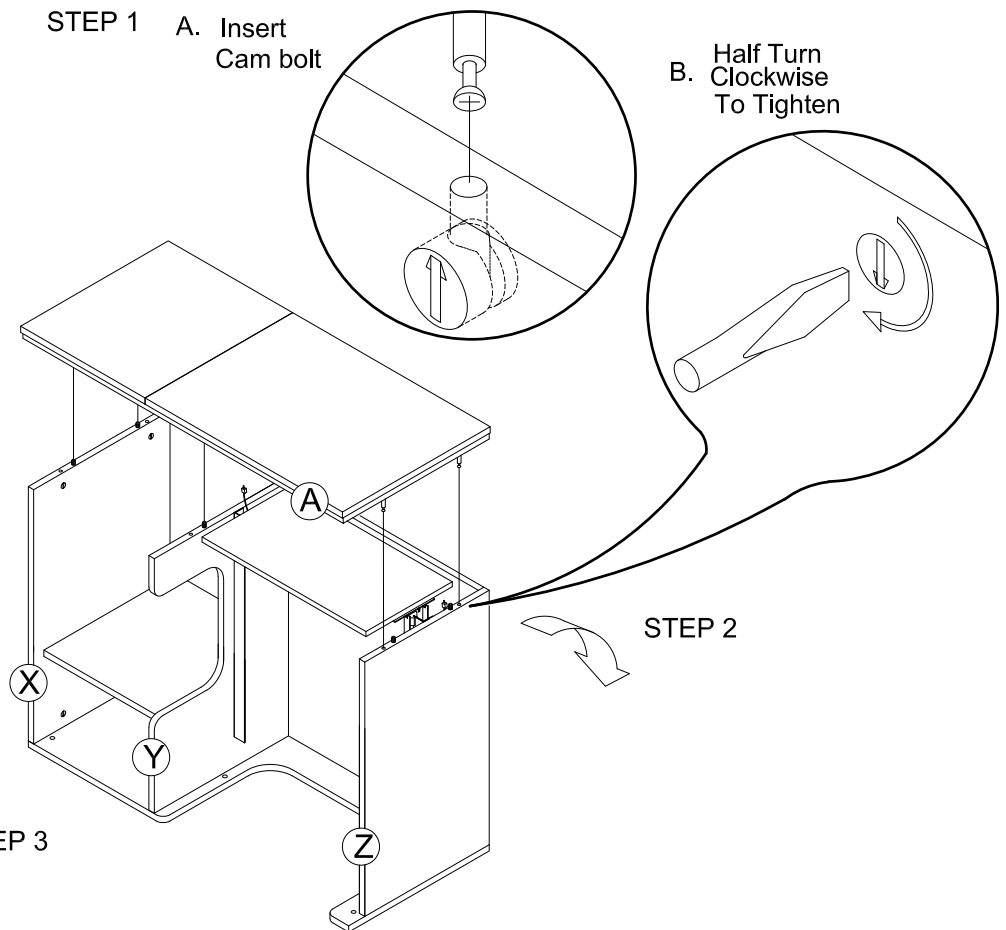

15. Castor Attachment



Screw s6 Ø4 x 45mm C/S (x4)

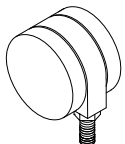

Castor Ø50mm




Washer




Spanner

Assembly Steps


1. Secure the Bottom and L/H End & Division together using Screw s6 Ø4 x 45mm
2. Place Castor Washers over Castor thread and screw into Bottom and secure using the Spanner.

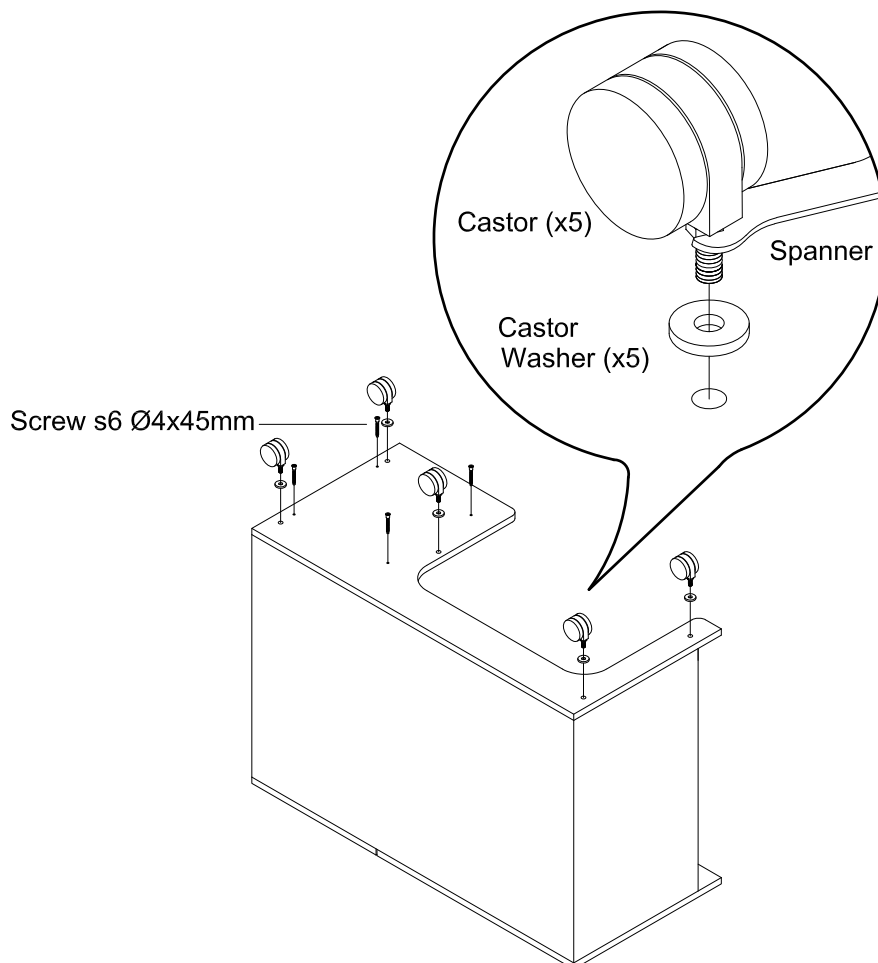

16. Back Flap Assembly

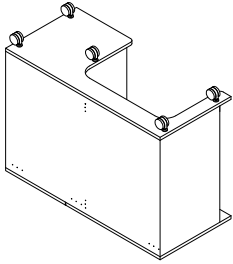

Cabinet Assembly

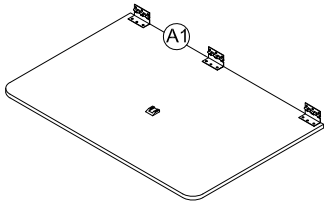



Back Flap Assembly




Screw s1 Ø4x14mm C/S (x9)

Assembly Steps

1. Fix the Back Flap to the Cabinet using Screw s1 Ø4x14mm C/S

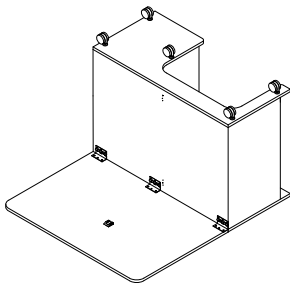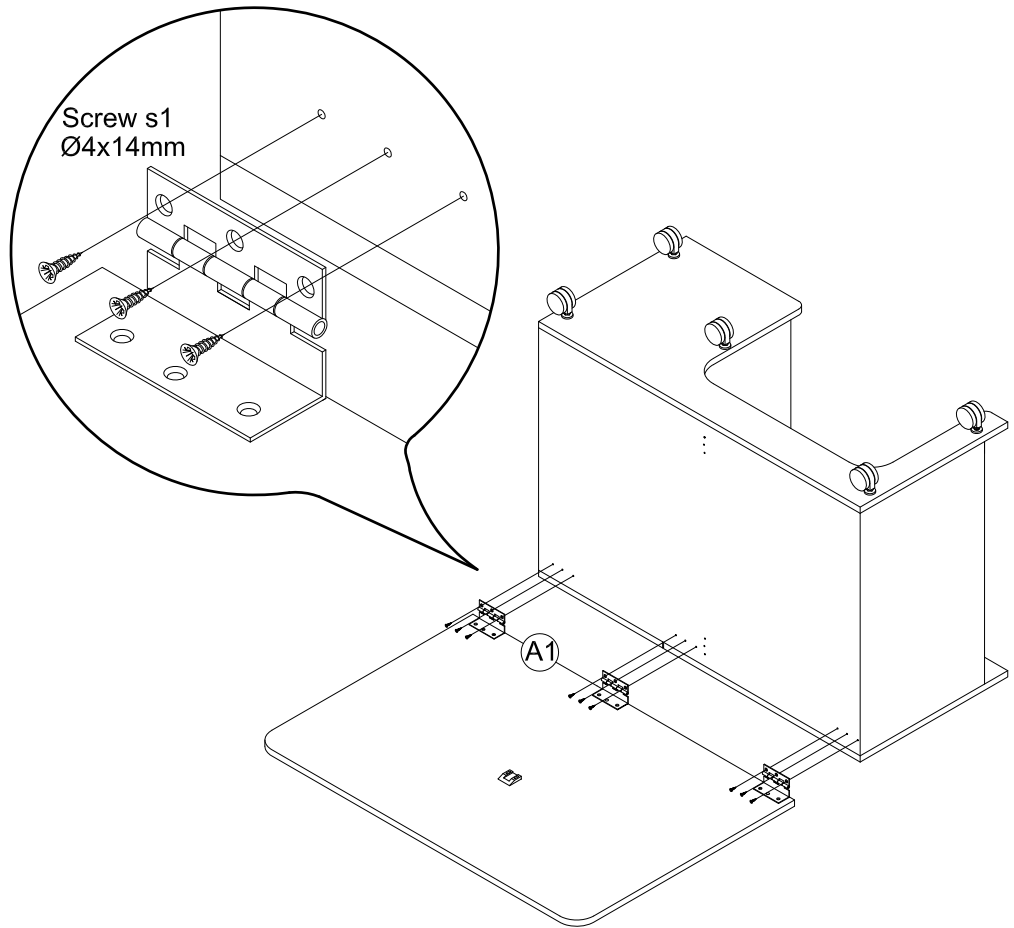

Cabinet Assembly



Gate Leg Assembly



Screw s1 Ø4x14mm C/S (x6)

Assembly Steps


1. Fix Gate Leg to the back of Cabinet using Screw s1 Ø4x14mm C/S
2. Swing Gate Leg against Back
3. Roll Cabinet back over onto Castors

Note:


It will require 2 people to lift and rotate Cabinet safely.

17. Gate Leg Assembly


STEP 1.

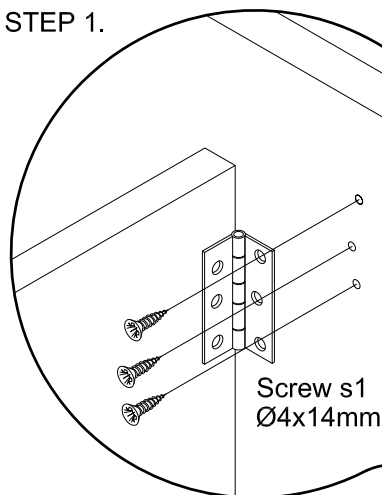

Screw s1
Ø4x14mm

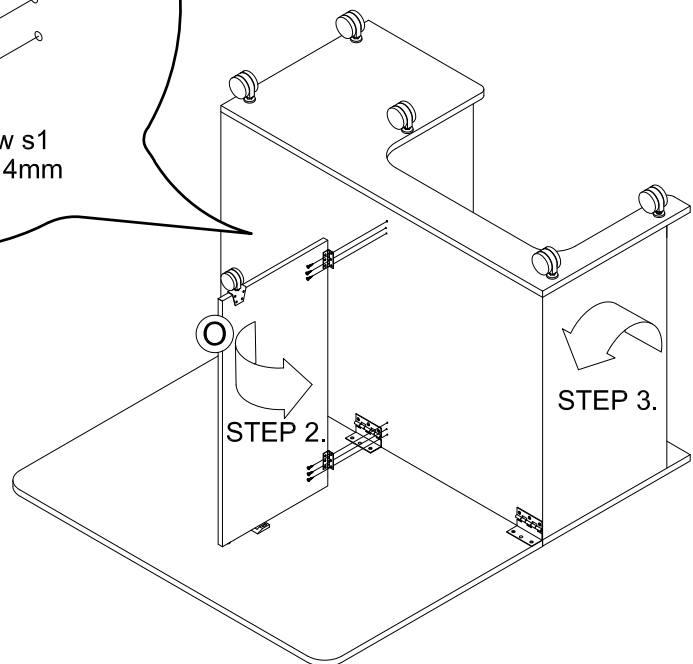

18. Small & Large Door Assembly

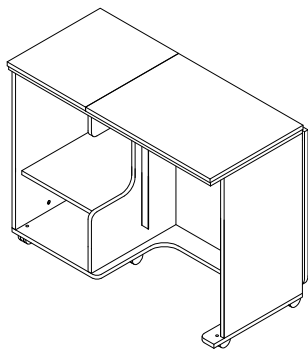

Cabinet Assembly




Screw s2 Ø3 x 14mm C/S (x12)

Assembly Steps

1. Fit Small & Large Doors to Cabinet Ends using Screw s2 Ø3x14mm C/S

Note:

Fit Screws into pre-drilled holes and secure

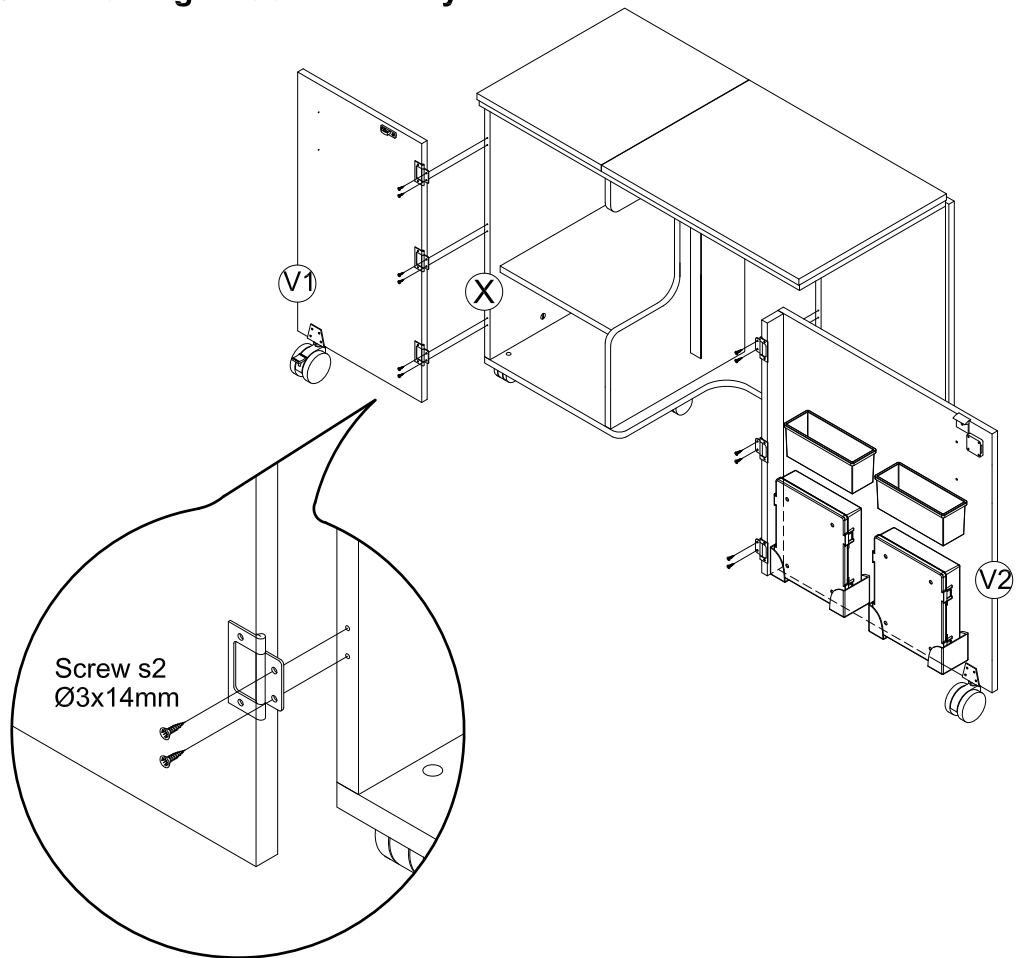

19. Handle Assembly



Escutcheon




Bow Handle (x2)



Handle Screw (x4)

Assembly Steps


1. Press the Escutcheon into the Large Door.
2. Extend Stay Arm and position over the Stay Arm Bracket on the Small Door.
3. Press the end of the Arm firmly and clip into Bracket to secure.
4. Fit Handles in place and secure using Screws supplied

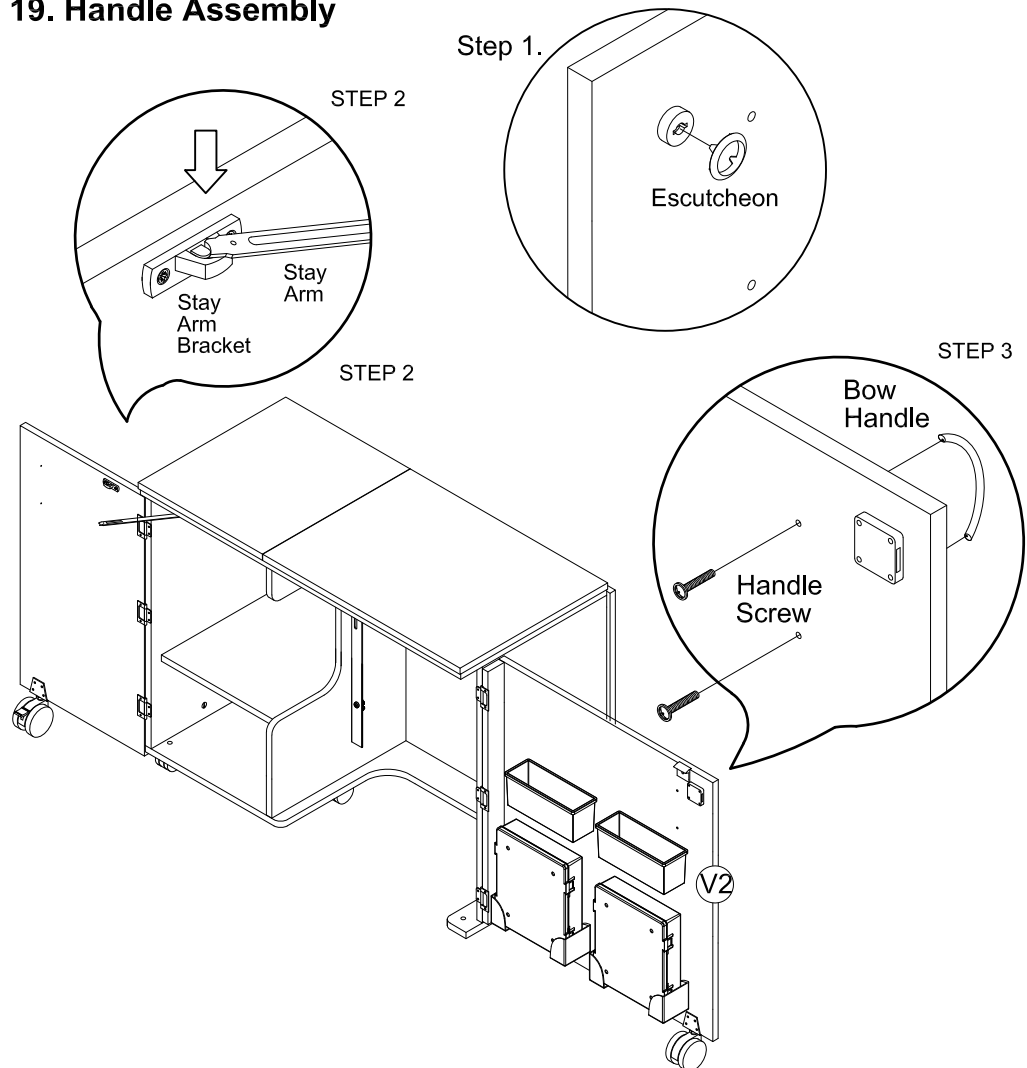

20. Drawer Assembly



Cam Ø15x10mm (x4)




Cam Bolt (x4)

Assembly Steps

1. Screw the Cam Bolts into the Drawer Front as shown.
2. Insert Cams into the Drawer Sides ensuring the arrow points to the front edge.

Note:


Arrow on Cam points towards the closest edge

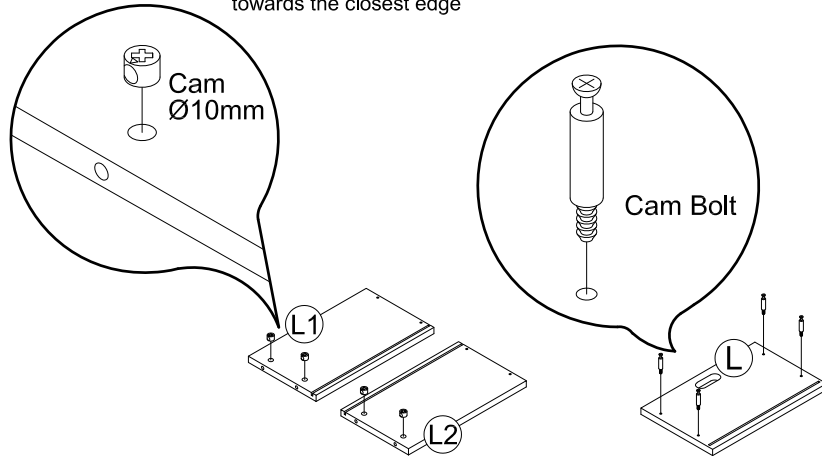

21. Drawer Assembly




Drawer Handle



Screw s5 Ø3.5x30mm (x4)

1. Insert Cam Bolt

2. Half turn clockwise to tighten

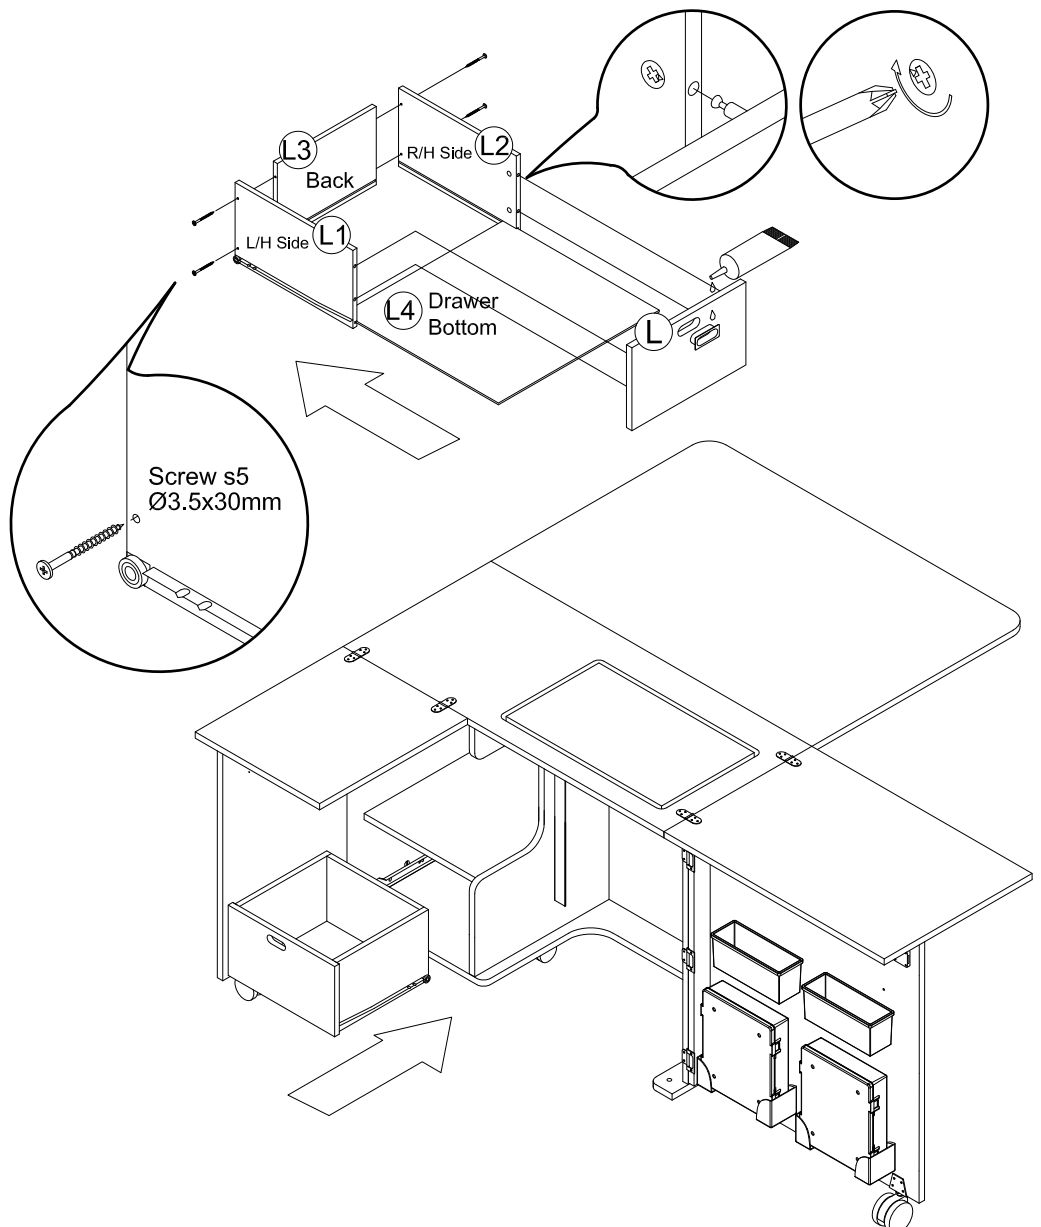

Assembly Steps

1. Place 4 to 5 drops of glue around the Drawer handle and press fit into Drawer Front
2. Secure the L/H & R/H Drawer Sides to the Drawer Back using Screw s5 Ø3.5x30mm
3. Insert Caps into the head of the screws.
4. Slide the Drawer Bottom into the Drawer Side groove.
5. Locate the Drawer Front and secure by turning the Cam a half turn clockwise.
6. Locate the Drawer on the runners and slide into Cabinet.