

NULLARBOR

ASSEMBLY INSTRUCTIONS



**PLEASE REFER TO
THESE INSTRUCTIONS
UPDATED - 13/01/2026**

 **HORN**

NULLARBOR

ASSEMBLY INSTRUCTIONS

It is recommended to assemble the cabinet on carpet or soft flooring to avoid scratches to cabinet panels.

A power drill / screwdriver and hammer is recommended for assembling this product, allowing for an easier and faster build.



NULLARBOR

ASSEMBLY INSTRUCTIONS

COMPONENTS

BOX 1 OF 2

- A. Tabletop
- B. Bottom Base
- F. Back Panel
- G. Lifter Platform
- Parts Box (See 2nd column)

BOX 2 OF 2

- C. Left Hand Panel
- D. Right Hand Panel
- E. Middle Panel
- H. Right Hand Shelf
- I. Left Hand Extension Door Part 2
- J. Right Hand Door
- K. Left Hand Extension Door Part 1
- L. Left-Hand Shelf
- M. Drawer Front
- N. Drawer L/H Side
- O. Drawer Back
- P. Drawer R/H Side
- Q. Drawer Base

ACCESSORY BOX


- Manual #692 Large Lifter
- L/H Lifter Rail
- R/H Lifter Rail
- Door Plates (x2)
- Ramps (x2)
- Equalisers (T-Pieces) (x2)
- Drawer Handle
- Insert Support
- Stay Arm
- Stay Arm Bracket
- Right-hand Cutout Cover
- Left Swivel Tray Set
- Large Bucket

PARTS BOX (BOX 1)

- Standard Castors (x6)
- Lockable Castors (x2)
- Castor Washers (x5)
- Castor Brackets (x3)
- Castor Spanner
- Flush Hinges (x6)
- Bow Handles (x2)
- Glue (x2) (OPTIONAL)
- Dowels (x40)
- Cams (x15)
- Cam Bolts (x15)
- Drawer Cams (x2)
- Drawer Cam Bolts (x2)
- S1 Screws (small silver screws)
- S2 Screws (long silver screws) (x10)
- S3 Screws (short brown screws for drawer runners) (x4)
- S4 Screws (long bronze screws) (x4)
- S5 Screws (x8)
- Lock, Key, and Escutcheon
- Lock Striker
- Drawer Runners (x2)
- Cable Management Piece

NULLARBOR

ASSEMBLY INSTRUCTIONS

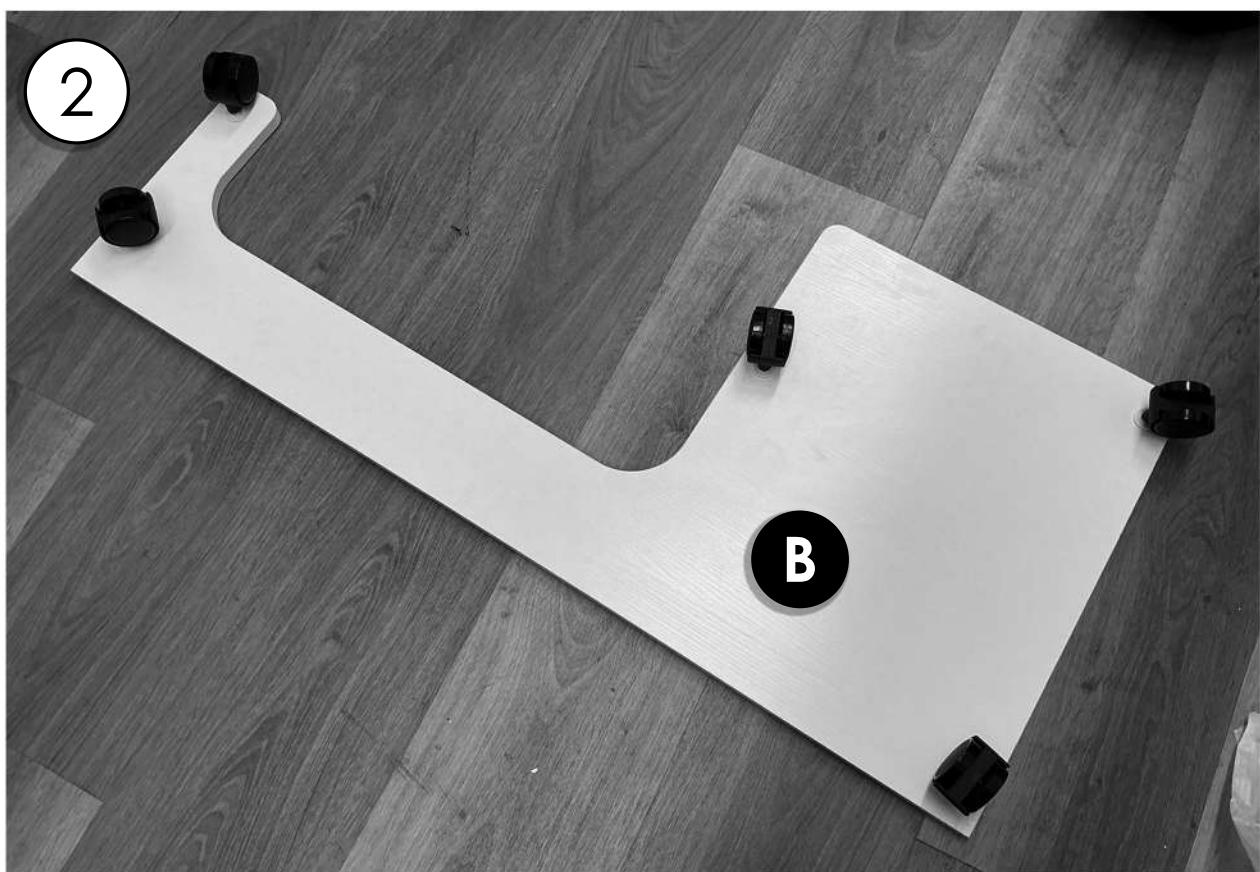

BOTTOM BASE (B) - BOX 1

- 1) Place castor washers on 5x standard castor wheels.
- 2) Install castor wheels onto Bottom Base **(B)**. Tighten with castor spanner.

NULLARBOR

ASSEMBLY INSTRUCTIONS

BOTTOM BASE (B) - BOX 1

- 3) Install insert support to Bottom Base using S1 screws.
- 4) Screw 5x cam bolts into cam bolt holes on Bottom Base (B).



NULLARBOR

ASSEMBLY INSTRUCTIONS


RIGHT HAND PANEL (D) - BOX 2

- 1) Place cams into cam holes on Right-Hand Panel **(D)** so the arrow is facing the nearest edge.
- 2) Place dowels into dowel holes on the top and bottom of the Right-Hand Panel **(D)** and gently hammer down.
- 3) Attach 3x flush hinges as shown to front end of the Right-Hand Panel **(D)** using S2 screws.

OPTIONAL: Add a small amount of glue into dowel holes on the Bottom Base **(B)**.

- 4) Line up bottom dowels on the Right-Hand Panel **(D)** with right-side dowel holes on Bottom Base **(B)** and attach panels. Wipe off any excess glue.
- 5) Tighten cams in a clock-wise direction.
- 6) Attach drawer runner to Right-Hand Panel **(D)** using 2x S3 screws as shown.

NOTE: IT IS IMPORTANT TO USE A SCREWDRIVER FOR S3 SCREWS TO AVOID STRIPPING THE SCREW. DO NOT USE POWER DRILL.

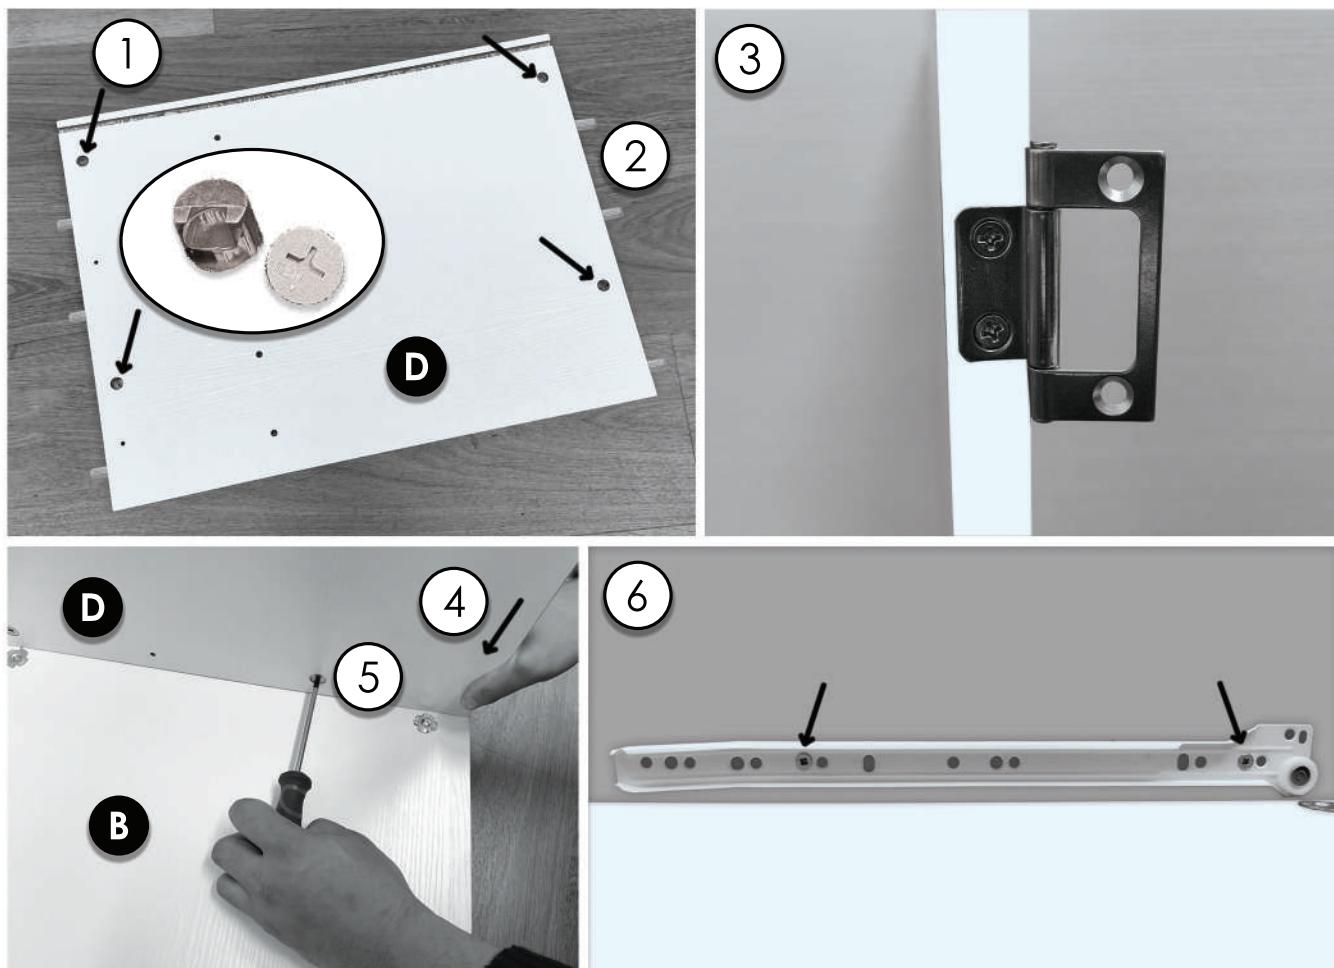




NULLARBOR

ASSEMBLY INSTRUCTIONS

DIVIDER (E) - BOX 2

- 1) Place cams into cam holes on Divider **(E)** so that the arrow is facing the nearest edge.
- 2) Place dowels into dowel holes on the top and bottom of Divider **(E)** and gently hammer down.
- 3) Take right-hand lifter rail and line up middle hole with the middle hole on Divider **(E)**. This will mean the bottom hole on the panel will line up with the second last hole on the rail, and the top hole on the panel will line up with the second hole from the top of the rail. Screw an S1 screw into the bottom hole only.
- 4) Install divider onto Bottom Base **(B)**, lining up dowels with dowel holes, and tighten cams in a clockwise direction.
- 5) Attach drawer runner to Divider **(E)** using 2x S3 screws as shown.

NOTE: IT IS IMPORTANT TO USE A SCREWDRIVER FOR S3 SCREWS TO AVOID STRIPPING THE SCREW. DO NOT USE POWER DRILL.

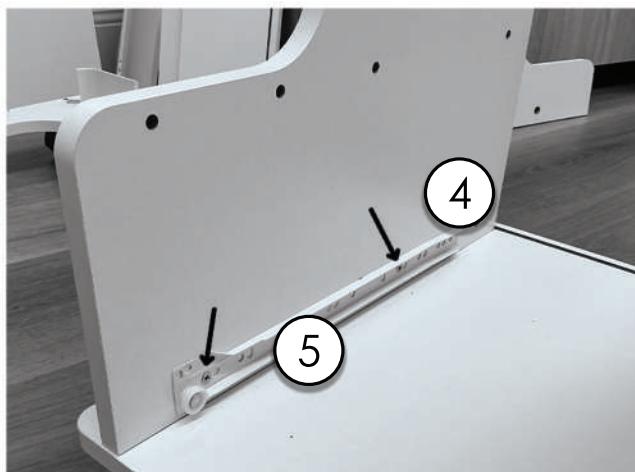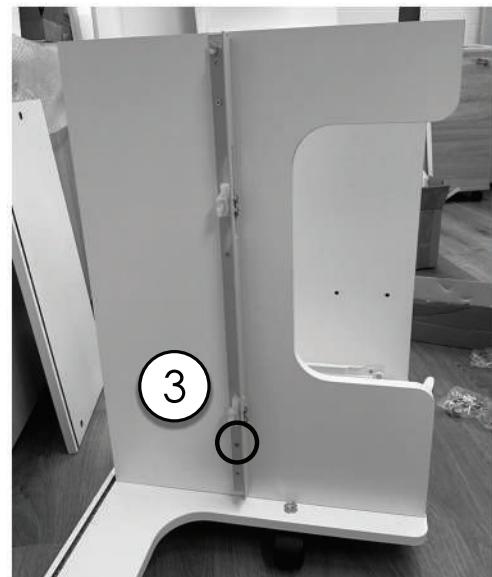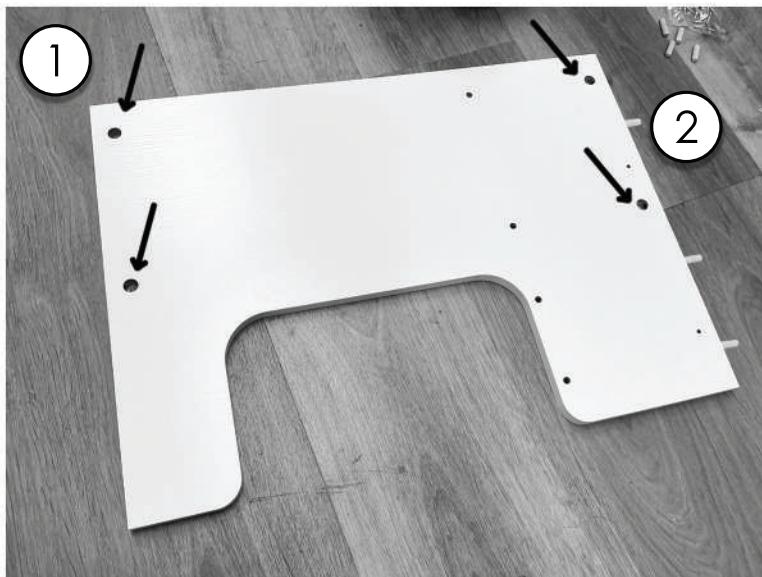

NULLARBOR



ASSEMBLY INSTRUCTIONS

RIGHT-HAND SHELF (H) - BOX 2

1) Place dowels into dowel holes on Right-Hand Shelf (**H**) and gently hammer down.

OPTIONAL: Add a small amount of glue to the dowel holes in Right-Hand Panel (**D**) and Divider (**E**).

2) Install shelf between Right-Hand Panel (**D**) and Divider (**E**), lining up the dowels on each side. Gently tap both side panels to push together until shelf is flush on both sides. Wipe off any excess glue.

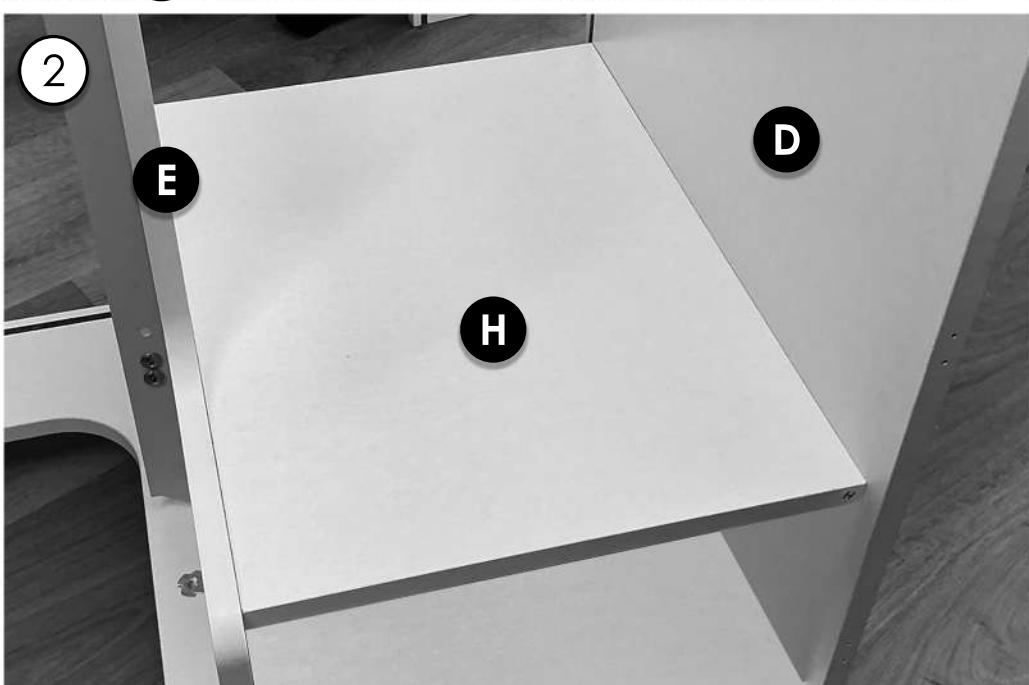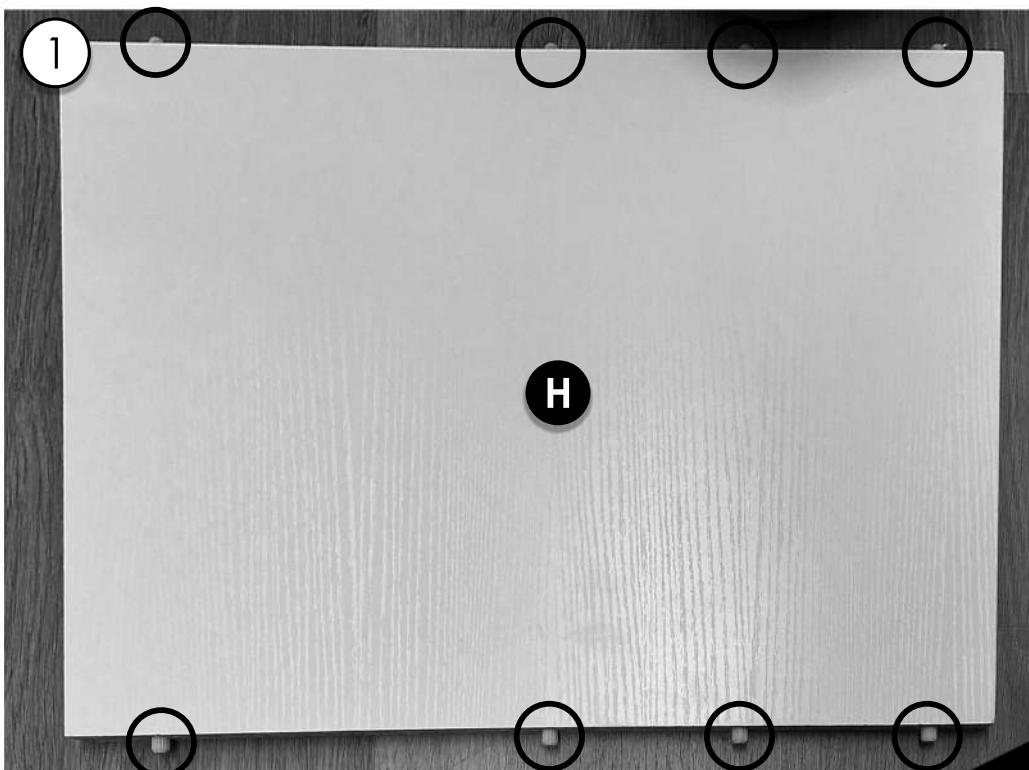


NULLARBOR

ASSEMBLY INSTRUCTIONS

DRAWER (M, N, O, P, Q) - BOX 2

- 1) Open bag labelled 'USE FOR DRAWER' and take out cams and cam bolts.
- 2) Place cams into cam holes on Drawer Side Panels (**N, P**) so the arrow is facing the nearest edge.
- 3) Place dowels into dowel holes on Drawer Side Panels (**N, P**) and gently hammer down.
- 4) Screw cam bolts into cam bolt holes in Drawer Front Panel (**M**).
OPTIONAL: Add a small amount of glue to dowel holes on Drawer Front Panel (M).
- 5) Attach one side panel of the drawer to Drawer Front Panel (**M**).
- 6) Slide Drawer Base Panel (**Q**) into designated slots on side and front panels. Attach other drawer side panel, lining up the dowels with the dowel holes. Wipe off any excess glue.
- 7) Attach Drawer Back Panel (**O**) to drawer using S4 screws. Tighten cams in a clock-wise direction.



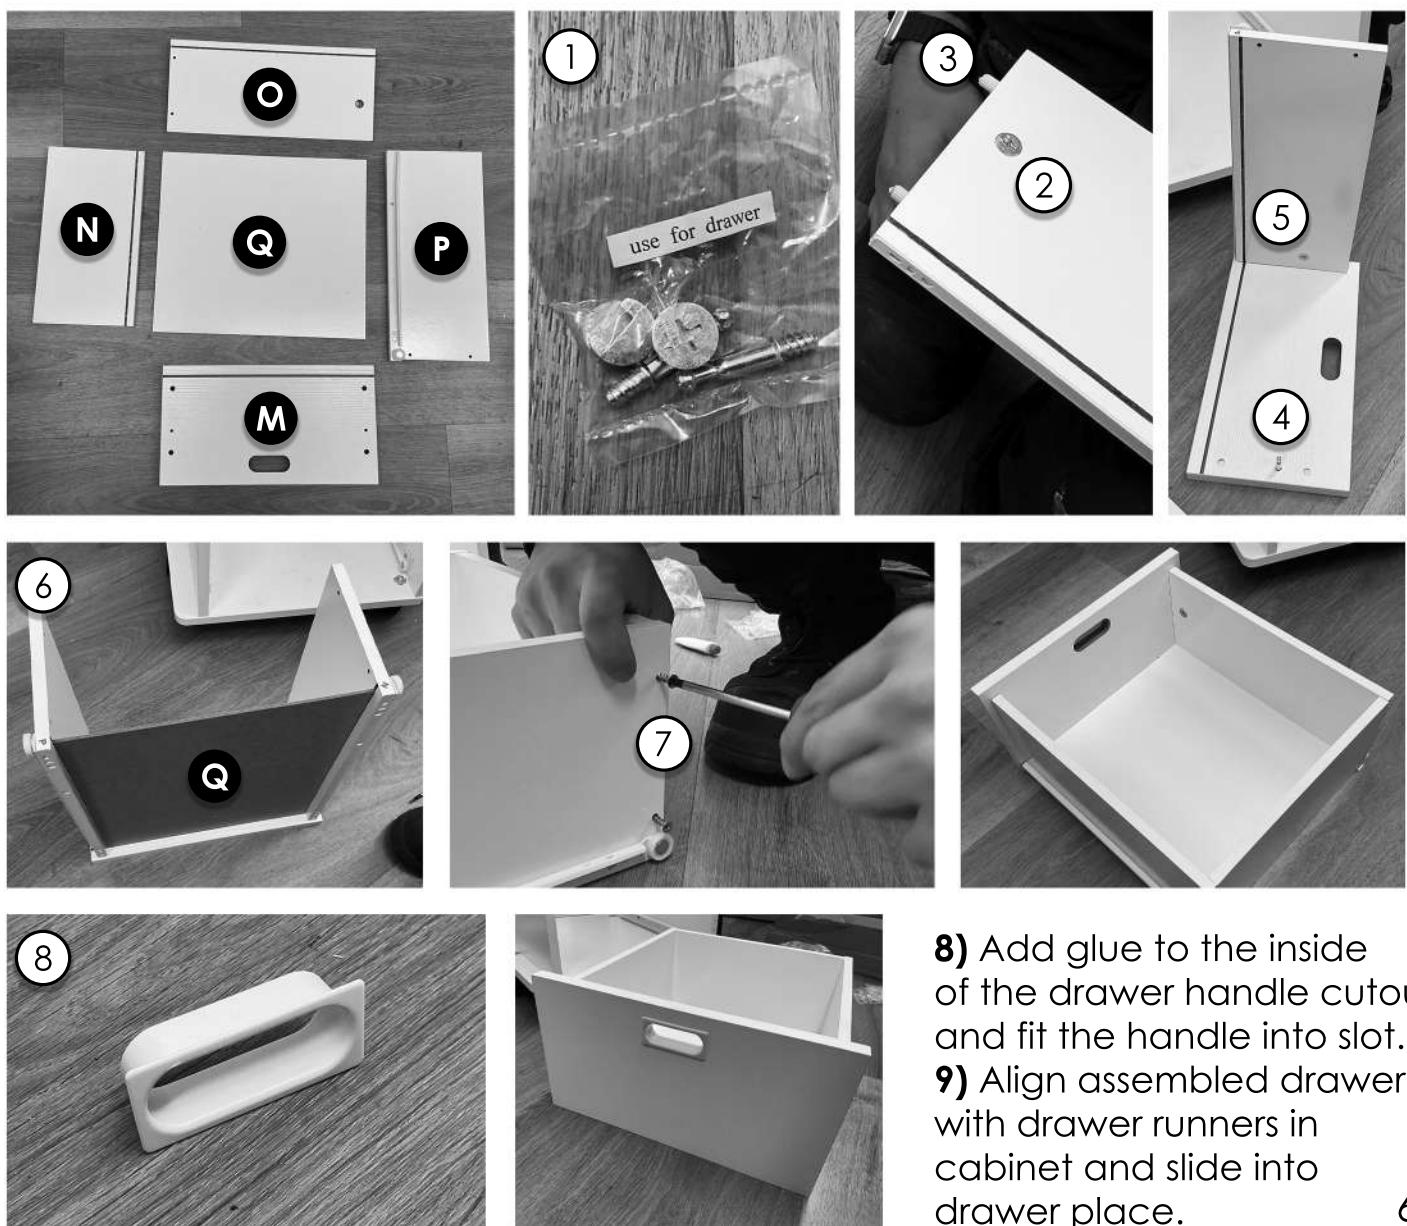


NULLARBOR

ASSEMBLY INSTRUCTIONS

LEFT-HAND PANEL (C) - BOX 2

- 1) Place cams into cam holes on Left-Hand Panel **(C)** so the arrow is facing the nearest edge.
- 2) Take the left-hand lifter rail and line up the middle hole with the middle hole on Left-Hand Panel **(C)**. This will mean the bottom hole on the panel will line up with the second last hole on the rail, and the top hole on the panel will line up with the second hole from the top of the rail. Screw an S1 screw into the bottom hole only.
- 3) Place dowels into dowel holes on Left-Hand Panel **(C)** and gently hammer down.
- 4) OPTIONAL: Add a small amount of glue into the dowel holes on the left side of Bottom Base **(B)**.
- 5) Attach 3x flush hinges as shown to back edge of Left-Hand Panel **(C)** using S1 screws.
- 6) Attach Left-Hand Panel **(C)** to Bottom Base **(B)**, lining up dowels with dowel holes. Wipe off any excess glue.
- 7) Tighten cams in a clockwise direction.

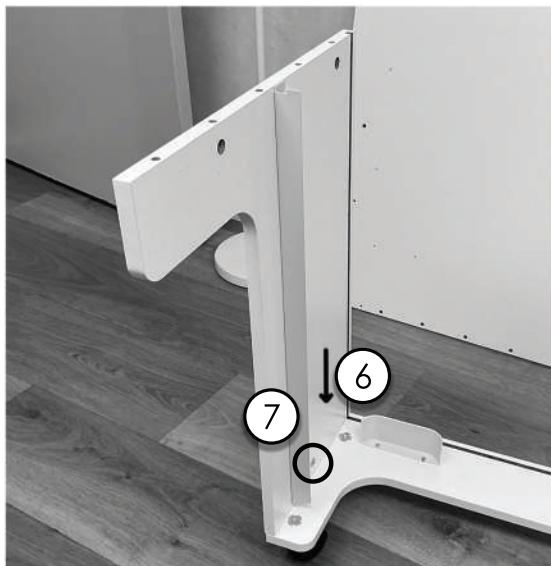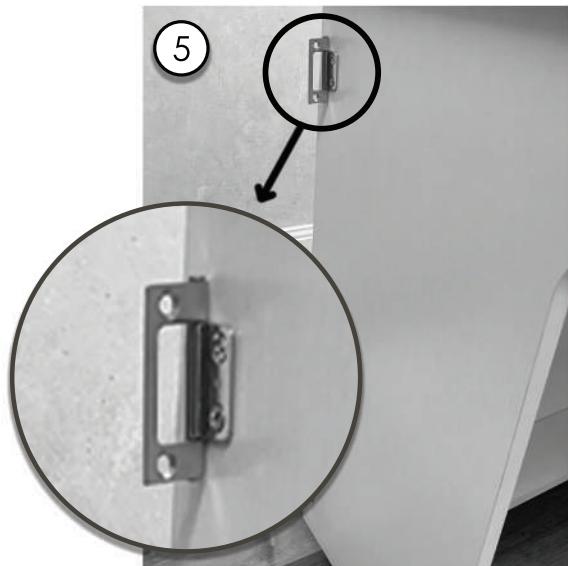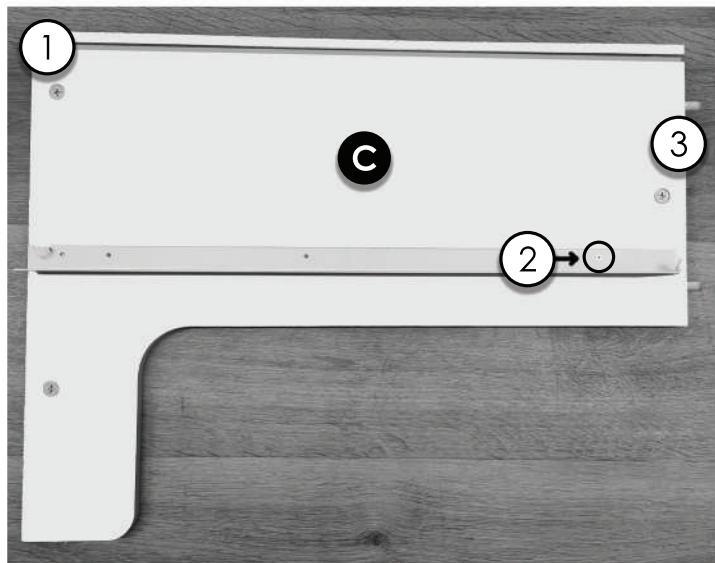

NULLARBOR



ASSEMBLY INSTRUCTIONS

BACK PANEL (F) - BOX 1

1) With the cable hole towards the floor, slide Back Panel **(F)** through slots at the back of the cabinet.

OPTIONAL: Add glue to the inside of the cable management cutout.

2) Insert cable management piece so it faces the inside of the cabinet. Wipe off any excess glue.

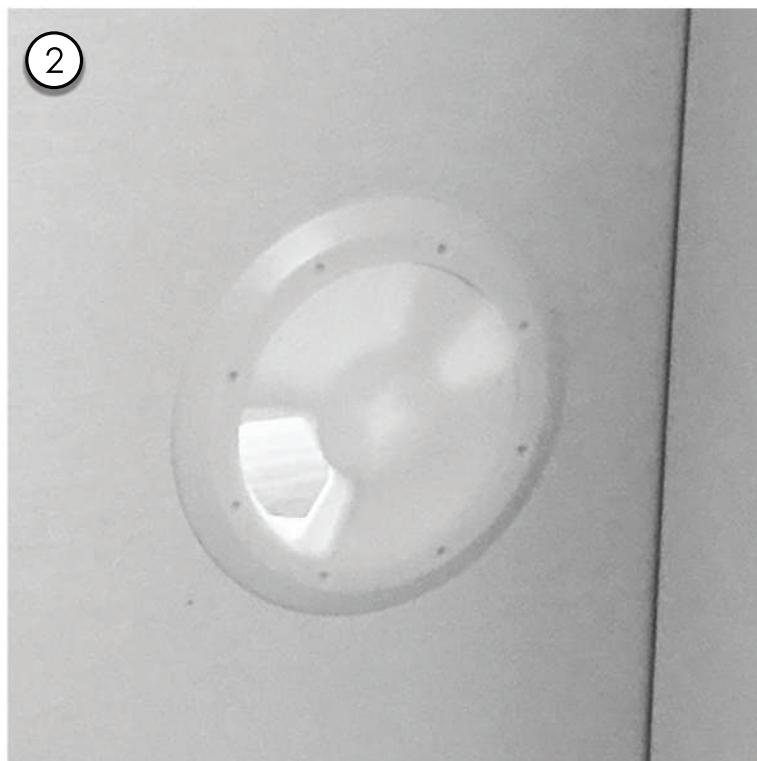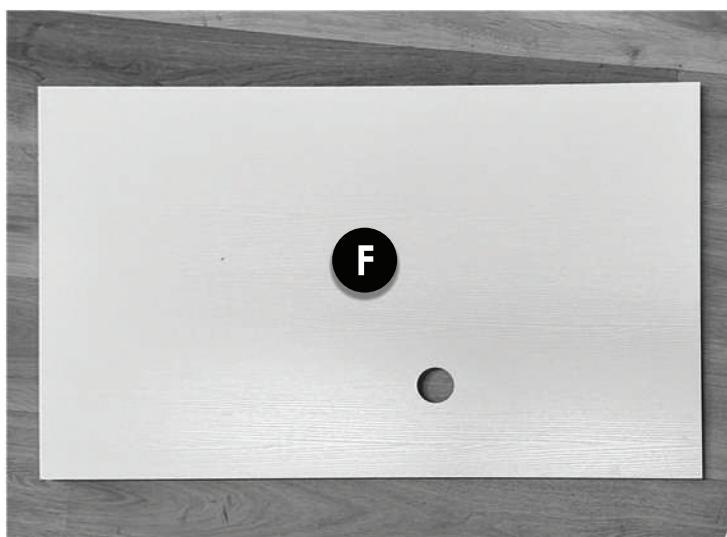

NULLARBOR

ASSEMBLY INSTRUCTIONS

TABLETOP (A) - BOX 1


- 1) Lay Tabletop (A) upside down.
- 2) Screw cam bolts into cam bolt holes in Tabletop (A).
- 3) Attach lock striker using S1 screws.
- 4) Attach ramps to Tabletop (A) using S1 screws.

OPTIONAL: Add a small amount of glue to dowel holes in Tabletop (A).

- 5) Place Tabletop (A) onto cabinet, lining up dowels with dowel holes. Ensure larger flap is on the left side of the cabinet.

It is recommended that two people perform this step.

- 6) Wipe off any excess glue, tighten cams in a clockwise direction.




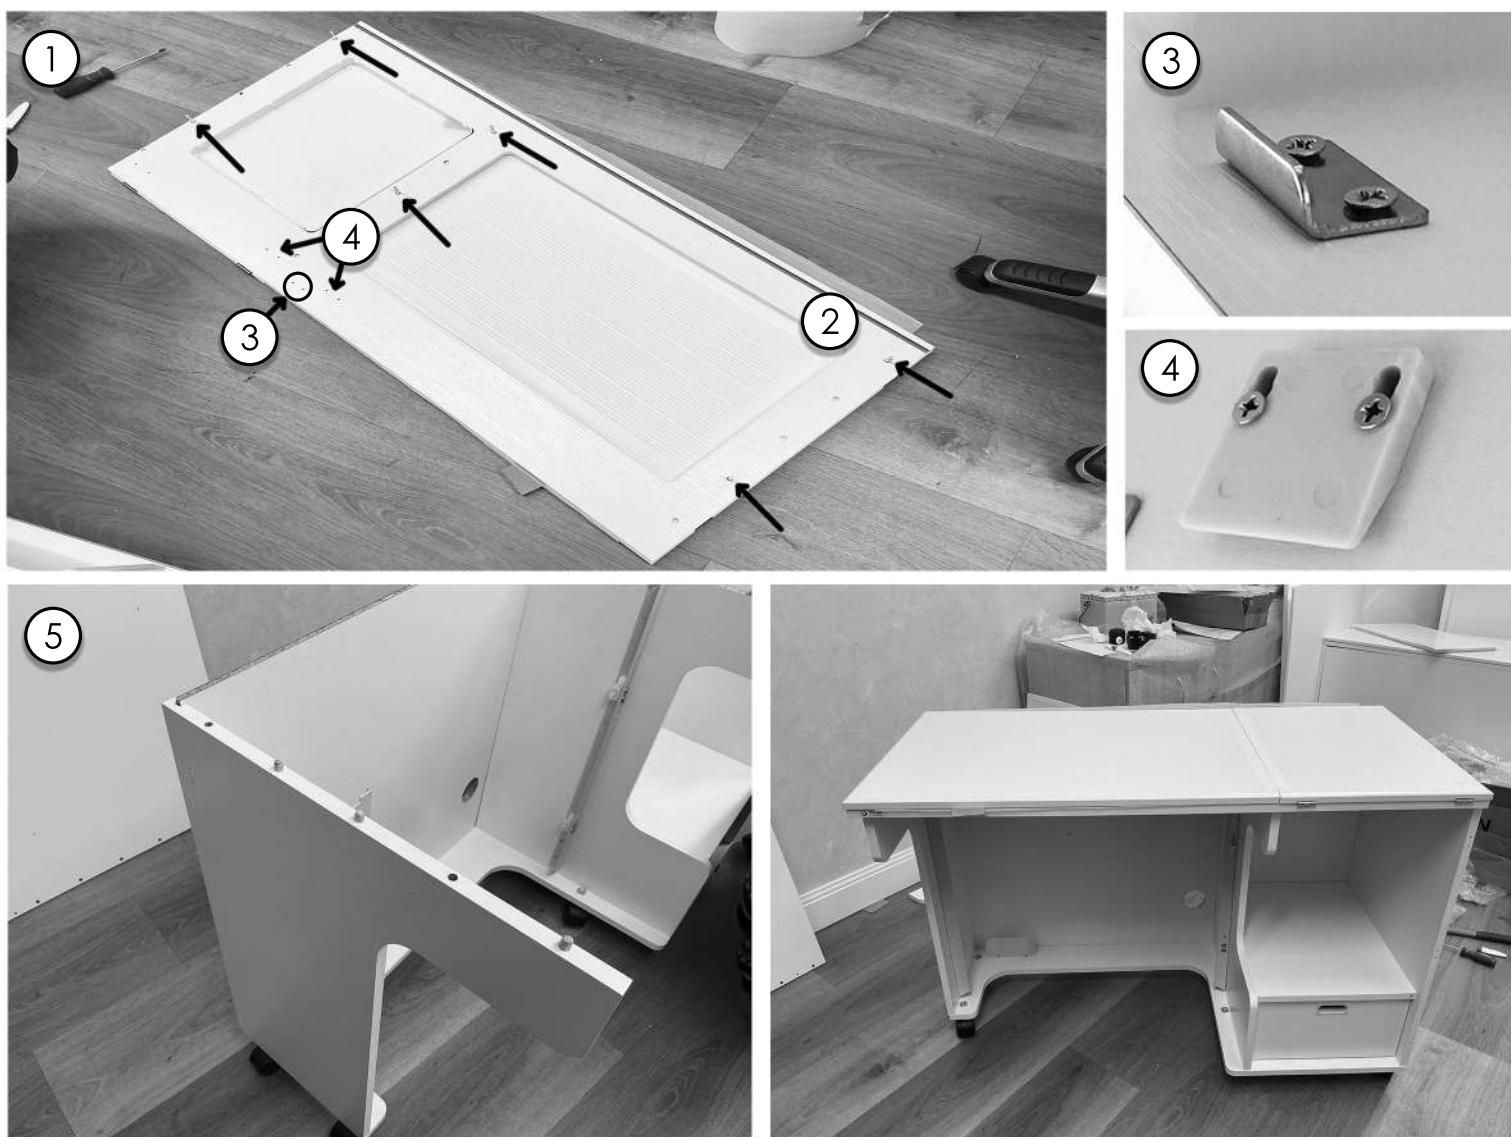


NULLARBOR

ASSEMBLY INSTRUCTIONS

RIGHT-HAND DOOR (J) - BOX 2

- 1) Attach castor bracket using S1 screws.
- 2) Attach door plates using S1 screws.
- 3) Attach equaliser (t-piece) using S1 screws.
- 4) Screw lockable castor wheel into castor bracket.
- 5) Attach door to the cabinet via flush hinges using S1 screws.
- 6) Attach stay arm bracket to Right-Hand Door (J) using S1 screws.
- 7) Attach stay arm to inside of cabinet using S5 screws. Insert round edge of stay arm into stay arm bracket.

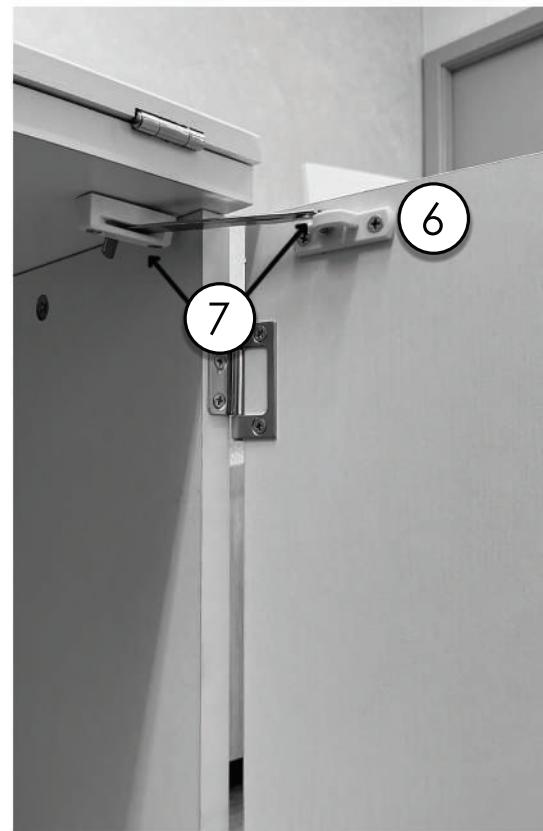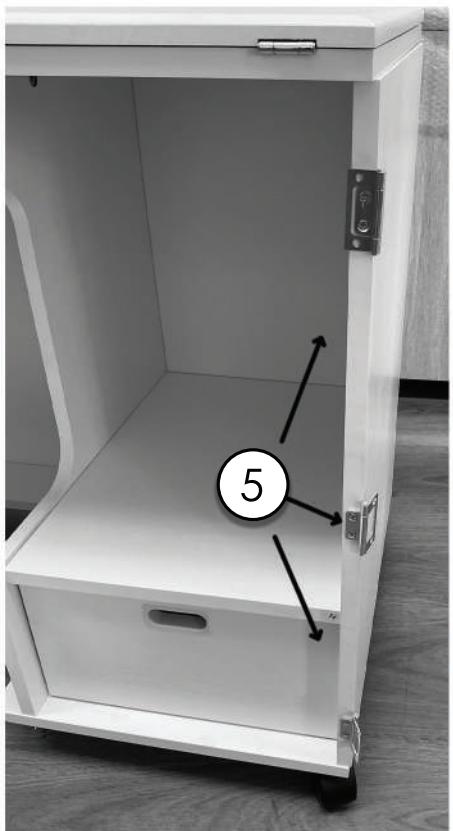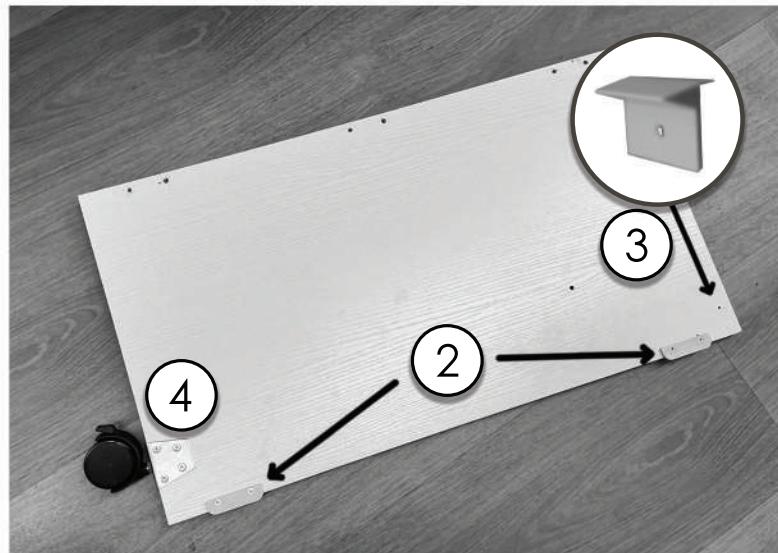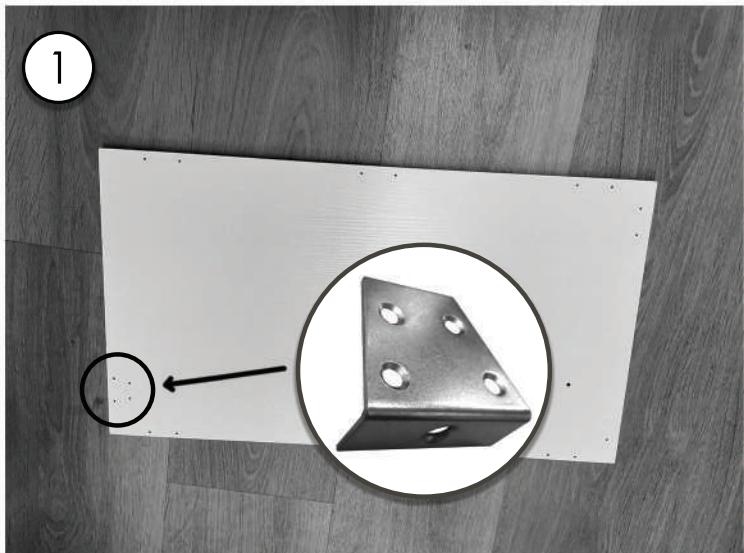


NULLARBOR

ASSEMBLY INSTRUCTIONS

LEFT-HAND EXTENSION DOOR PART 1 (K) + LEFT-HAND SHELF (L) - BOX 2

- 1) Place cams into cam holes on Panel **K** and Panel **L** so the arrow is facing the nearest edge.
- 2) Screw cam bolt into cam bolt hole on Panel **K**.
- 3) Place dowels into dowel holes on Left-Hand Shelf (**L**).
- 4) Attach castor bracket on Panel **K** with S1 screws.
Screw castor into castor bracket.
OPTIONAL: Add a small amount of glue to dowel holes on the left side of Panel K.
- 5) Attach Panel **L** to Panel **K**, lining up dowels with dowel holes.
Wipe off any excess glue.

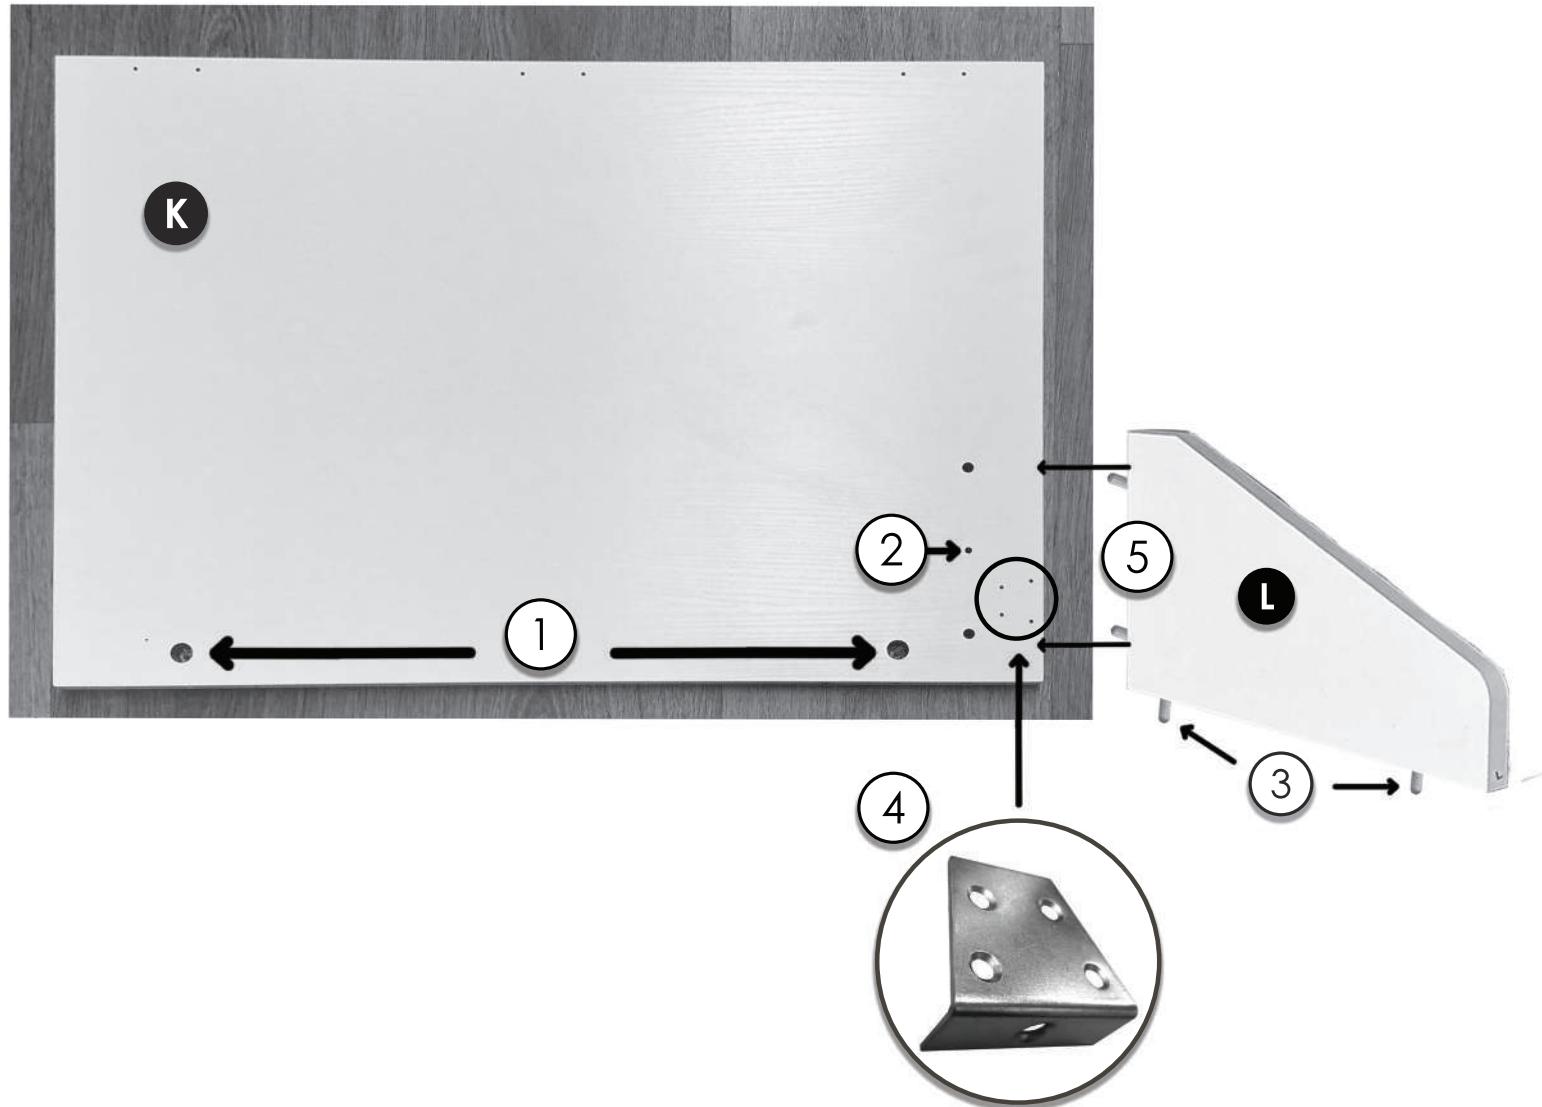

NULLARBOR


ASSEMBLY INSTRUCTIONS

LEFT-HAND EXTENSION DOOR PART 2 (I) - BOX 2

- 1) Screw cam bolts into cam bolt holes in Panel I.
- 2) Place dowels in dowel holes in Panel I.
- 3) Attach castor bracket using S1 screws.
- 4) Attach equaliser (t-piece) with an S1 screw.
- 5) Attach swivel bracket using S5 screws
- 6) Place clear swivel trays onto swivel bracket, then place cream swivel tray ontop of clear trays and screw in place using S5 screws.
- 7) Attach large clear bucket using S1 screws.

NOTE: USE SCREWDRIVER FOR LARGE BUCKET TO AVOID SCRATCHING BUCKET. DO NOT USE POWER DRILL.

- 8) Screw lockable castor into castor bracket.
- 9) Add a small amount of glue to dowel holes on Panel I.

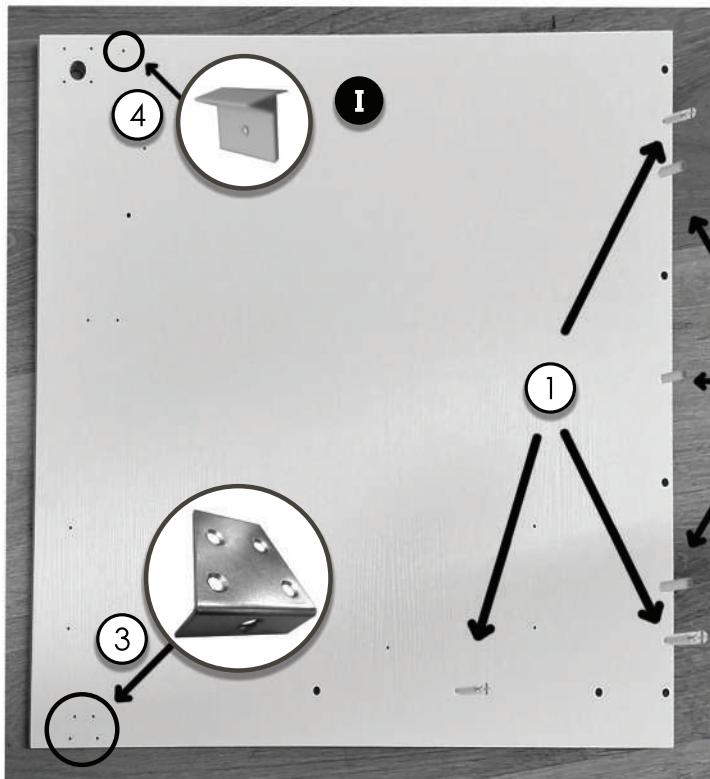

NULLARBOR

ASSEMBLY INSTRUCTIONS

LEFT-HAND EXTENSION DOOR PART 2 (I) - BOX 2


10) Attach Panel I and Panel K together, lining up dowels with dowel holes. Wipe off any excess glue.

11) Attach joined panels to main cabinet via flush hinges, starting from the top hinge.

12) ^a Place escutcheon into lock hole at front of Left-Hand Extension Door (I).
^b Attach lock to other side of Panel I using S5 screws, ^c ensuring keyhole is at the correct orientation.

13) Attach bow handles to both doors.

14) If doors are difficult to lock, height of front castors may need to be adjusted using castor spanner.


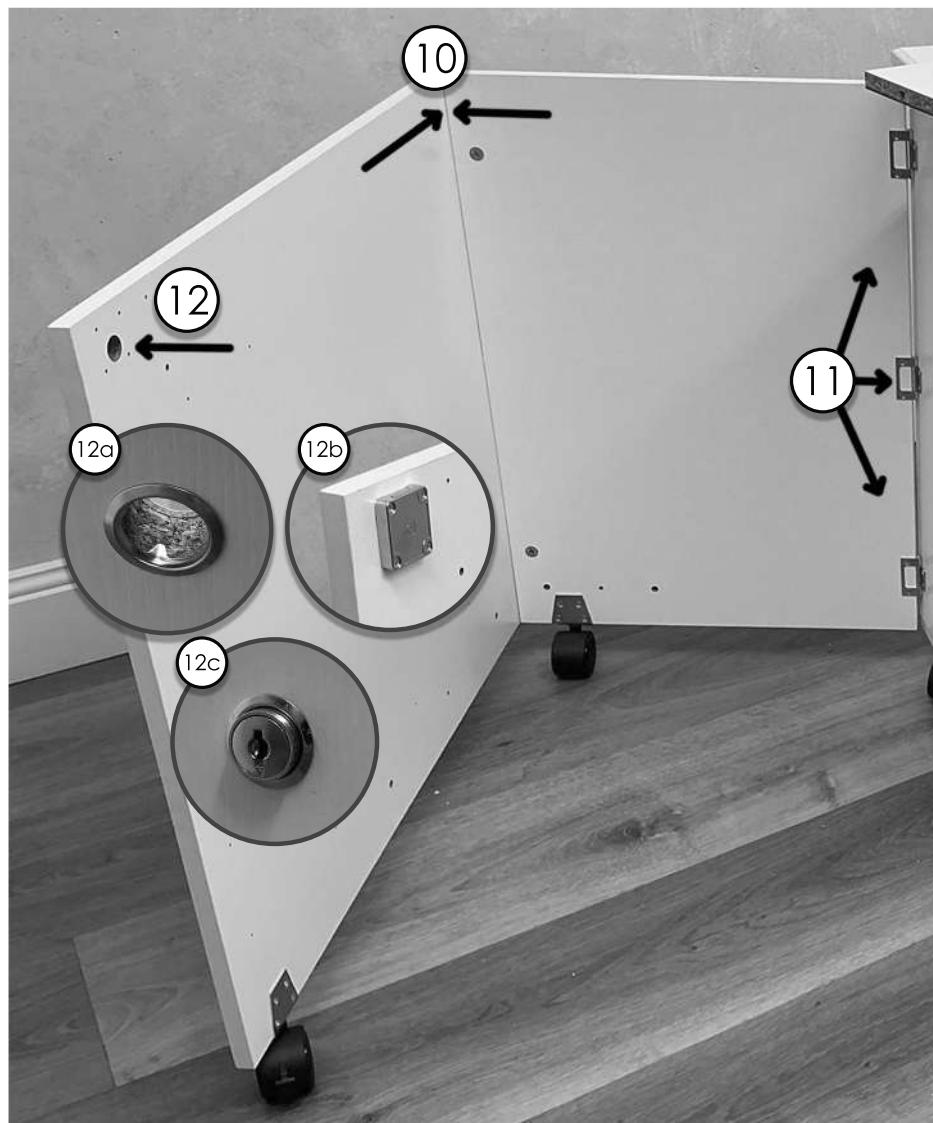


NULARBOR

ASSEMBLY INSTRUCTIONS

LIFTER + LIFTER PLATFORM (G) - BOX 2

- 1) Remove tape from Tabletop **(A)**. Open cabinet doors and rest tabletop flaps on top of doors. Take lifter and cut middle cable tie connecting each side of the metal cable. Position lifter on lifter board as shown and line up holes. Screw lifter to lifter board using 4x S1 screws.
- 2) Pull lifter rails forward.
- 3) Slide lifter onto rails, exposed side up. Cut remaining cable ties.

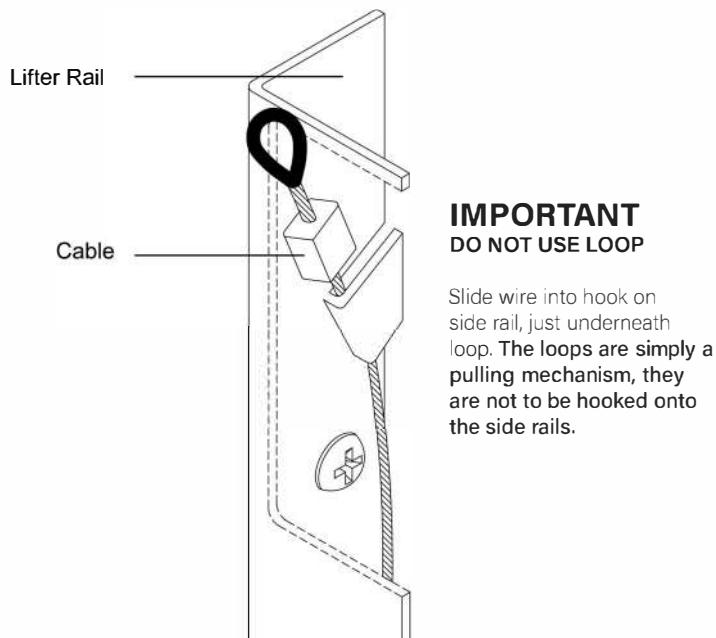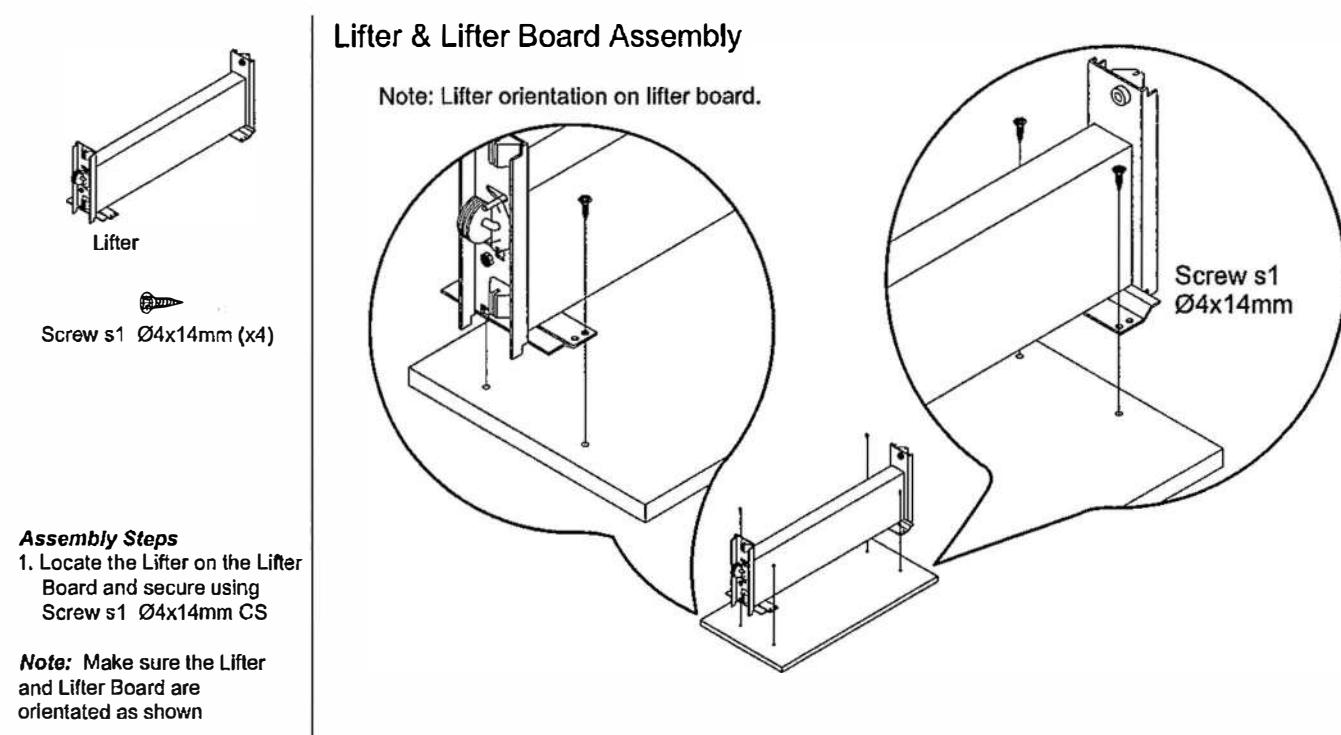

- 4) Slot metal cables through slots at top of rails.
- 5) Screw rails in place through the second hole from the top of each rail using S1 screws.
- 6) Push down on platform through top of cabinet until it clicks. Push down again until you hear another click, then release and let platform rise to highest position.
- 7) Screw in middle screws of rails to secure.

NULLARBOR

ASSEMBLY INSTRUCTIONS

ACCESSORIES - BOX 3

- 1)** Place right-hand cutout cover in slot in right-hand corner of cabinet tabletop.

Enjoy your new Horn cabinet! :)

Need help? Call Head Office: 02 8881 2111