



# Scan the QR code below for follow-along video instructions on assembling your Sovereign MKIII.



A power drill / screwdriver is recommended for assembling this product, allowing for an easier and faster build.



#### **F** WARNING

Please refrain from testing the electric lift prior to completing assembly.

## **COMPONENTS**



Lifter Straighteners



Lifter Rails

Power Adapter + Cable



Cable Clips




Switchbox

### **ELECTRIC LIFTER**

#### INSTALLATION INSTRUCTIONS

**NOTE:** Photos depict installation on the Sovereign MKIII, but otherwise, installation is much the same on every compatible HORN cabinet.

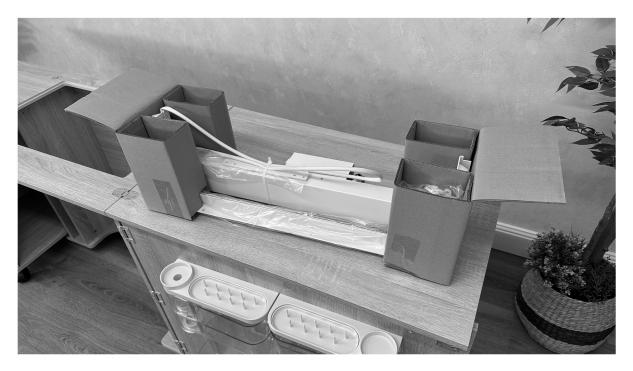



**1.)** Remove the Lifter & Accessories from its packaging. Refer to the Components page of this manual to ensure you have all the necessary components to assemble and install the Electric Lifter in your HORN compatible cabinet.






**2.)** Cut the plastic cable ties on the Lifter holding the looped metal wires in place.



**3.)** Position the Lifter Rails into place and secure the bottom screws to your cabinet using the Lifter screws provided with your main cabinet's box.

**4.)** Slide the Lifter into the side rails between the guides and ensure the looped wire is hooked to the top of the rails.

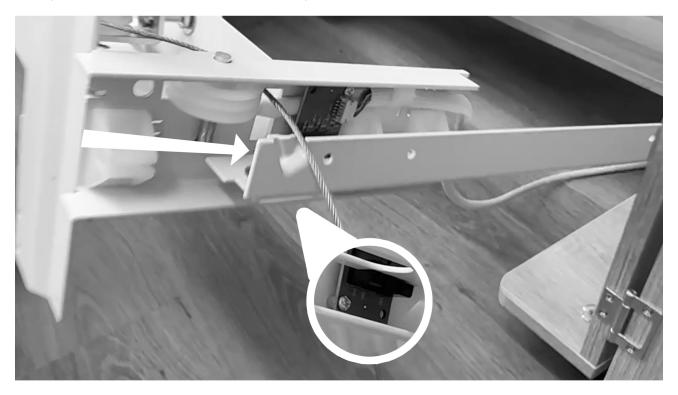


5.) Ensure the looped wire is hooked to the top of the rails on both sides.



### **ELECTRIC LIFTER**

#### INSTALLATION INSTRUCTIONS

**6.)** Lift the Lifter and Lifter Rails into place and screw the Middle and Top screws to your cabinet.

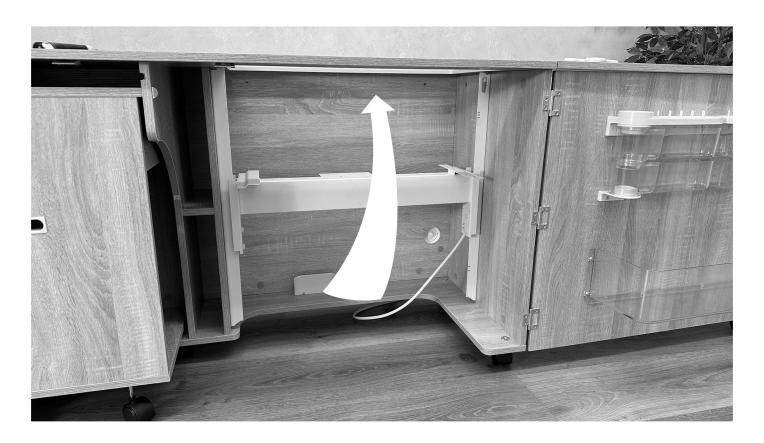

**7.)** Using a power drill, place the switch box to your ideal position, drill screw holes and screw into place.






**8.)** For cable management, feed the Switch Box's cable through the cutout of the Lifter Rail.




**9.)** Plug the Switch Box cable to the Electric Lifter.



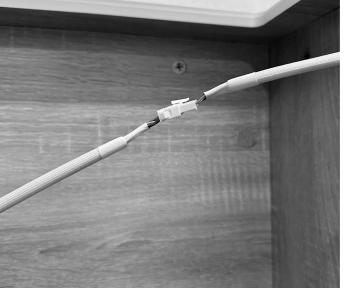

10.) Plug the Power Adapter to the Electric Lifter's Switch Box.



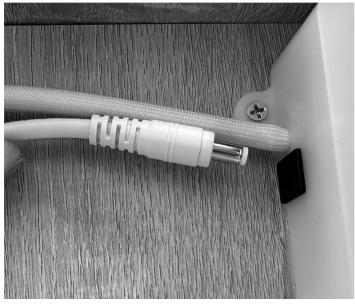




OPTIONAL: Cable Management with Adhesive Cable Clips.








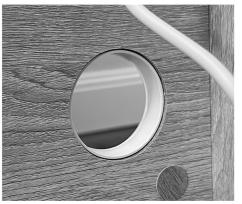



11.) Plug in the Lifter to Power and verify Electric Lifter Procedures.



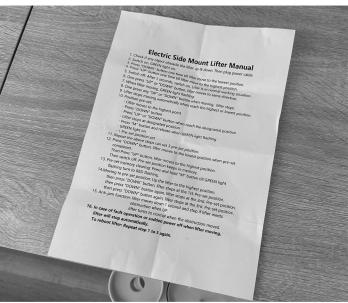

**12.)** Press the Down Button on the Switch Box, and use the Lifter Board to apply even pressure to the Lifter as it lowers for the first time.







13.) Place the Lifter Board on the Lifter and screw into Place



